

PREFACE

The Parts-List is meant for the Scooter Models manufactured by Standard Motor Corporation. Before you place an order, please refer to the Parts-List and be sure to write down the correct numbers and names of the parts you want.

(Parts can be various from areas and local market models)

1. We will keep you informed if any information or price has been changed. As soon as you receive the information, please update your Parts-List accordingly and place your order based on the newest information.

2. Abbreviation:

Abbreviation used in the List stands for the meaning as follows:

F: front R: right W: watt of bulb
B: rear T: number of gear
L: left V: volt of bulb

3. For the component parts, a V is marked before the parts name.

4. The quantity used for the components is indicated on "Q'TY" column.

(i.e.) PARTS NO. PARTS NAME Q'TY REMARK

33211-NAF-01 STAND, main 1

93580-62614 . SNUBBER 1

5. Selective components can be ordered at the minimum selling units only.

6. Engine Number and Color Code

<u>Style</u>	<u>Color</u>	<u>Number of Engine</u>	<u>Style</u>	<u>Color</u>	<u>Number of Engine</u>
NAF01	Black	7000001	NAF06	Yellow	7000001
NAF02	Red	7000001	NAF07	Silver	7000001
NAF03	Green	7000001	NAF08	White	7000001
NAF04	Dark Green	7000001	NAF09	Rose	7000001
NAF05	Blue	7000001	NAF10	Dark Blue	7000001

7. Pattern and Color: Indicate the color code after the model number and write the full name of the selected color.

(i.e.) PARTS NO. PARTS NAME Q'TY REMARK

51151 -NAF-0001 FENDER,front 1 Black Color

51151 -NAF-0002 FENDER,front 1 Red Color

8. Parts Number

(A) General Parts:

- - a

parts number type code changind color remark
code code code

(B) Standard Parts:

- -

parts number style code processing
code

本零件手冊僅適用於本公司所生產的機種，當您要訂購此機種之零件時，請參考這本手冊，並正確的引用零件號碼和零件名稱。

(配備以地域實車為準)

一、在本零件手冊發行後，若有修改、增訂或價格調整時，將會另行通知，當您接到修改通知後，請您務必按照修改通知更正您手中的零件手冊，以隨時保持準確度。

二、縮寫：

下列是使用在本零件手冊內的縮寫代號

?前 I齒數
3後 V燈泡伏特
乙左 V燈泡瓦特
8右

三、以組立總成形態供銷之零件，在零件名稱前空一個字母之空間，在此空間印有一個“.”點號來表示。

四、組立總成構成零件數之指示，登載在每一個構成零件右邊之用量欄內，是每一獨立組立總成單位中之數量。

(例)部品番號 英文名稱 中文名稱 用量備註

332U-NAF-01 STAND, main 主腳架 1
93580-62614 .SNUBBER 主腳架緩衝橡皮塊 1

五、細小之見件以本公司之設小販賣場位為購取位(價格另以理位價計)。

六、引擎編號及色彩符號

型式 顏色	引擎編號	型式 顏色	引擎編號
NAF01 黑	7000001	NAF06 黃銀	7000001
■ □ 02 紅	7000001	NAF07 白	7000001
■ ? 03 藍	7000001	NAF08 —	7000001
脚 04	7000001	NAF09 玫、I	7000001
麵 5	7000001	NAF10 7 —	7000001

七、圖案色彩之選購：在部品番號後寫出選用之色彩代號，並在備註欄內寫出選用之色彩全名。

(例)部品番號	英文名稱	中文名稱	用量備註
51151-心^0001	FENDER, front	擋風板	1用於黑車
51151^0002	FENDER, front	擋風板	1用於紅車

八、部品番號

(八) 一般物品

□□□□□ — □□□□ — □□□□□

部 品 碼 機 種 代 號 設 變 碼 顏 色 代 號 附 註 碼

0)標準品

□□□□□ — □□□□□□ — □


部 品 碼 規 格 碼

處理別代碼

CONTENTS

巨 錄

FIG. 01 CYLINDER 汽缸-----	1	FIG. 23 OIL TANK 潤滑油箱-----	57
FIG. 02 CRANKSHAFT.PISTON 曲軸・活塞-----	3	FIG. 24 STEERING HANDLE.CABLE轉向把丁:鋼索-----	59
FIG. 03 AIR SHROUD.FAN 空氣進氣孔・風扇-----	5	FIG. 25 COWLING 整流罩;Y.....	63
FIG. 04 OIL PUMP 潤滑油泵-----	7	FIG. 26 SPEEDOMETER 速度表-----	65
FIG. 05 CARBURETOR 化油器-----	9	FIG. 27 HEADLIGHT 前燈-----	67
FIG. 06 INTAKE 空氣吸入口-----	13	FIG. 28 TAILLIGHT 後燈-----	69
FIG. 07 CRANKCASE 曲軸箱-----	17	^ FIG. 29 FRONT WHEEL 前輪.....	71
FIG. 08 STARTER 起動機構-----	21	FIG. 30 REAR WHEEL 後輪-----	75
FIG. 09 CLUTCH 離合器-----	25	FIG. 31 HANDLE SWITCH.LEVER把手開關.把手-----	77
FIG. 10 TRANSMISSION 傳動機構-----	29	FIG. 32 ELECTRICAL 1 電裝 1-----	79
FIG. 11 EXHAUST 排氣管-----	31	FIG. 33 ELECTRICAL 2 電裝 2-----	81
FIG. 12 GENERATOR 發電機-----	33	FIG. 34 Numerical Index 部品番號索引-----	83
FIG. 13 STARTING MOTOR 起動馬達-----	35		
FIG. 14 FRAME 車架-----	37		
FIG. 15 REAR SUSPENSION 後懸吊系統-----	39		
FIG. 16 FRONT FORK 前叉-----	41		
FIG. 17 FENDER 擋風板-----	43		
FIG. 18 INNER BOX 行李箱-----	45		
FIG. 19 SIDE COVER 側蓋-----	47		
FIG. 20 STAND.FOOTREST 支架.腳踏板-----	49		
FIG. 21 SEAT 座墊-----	51		
FIG. 22 FUEL TANK 油箱-----	55		

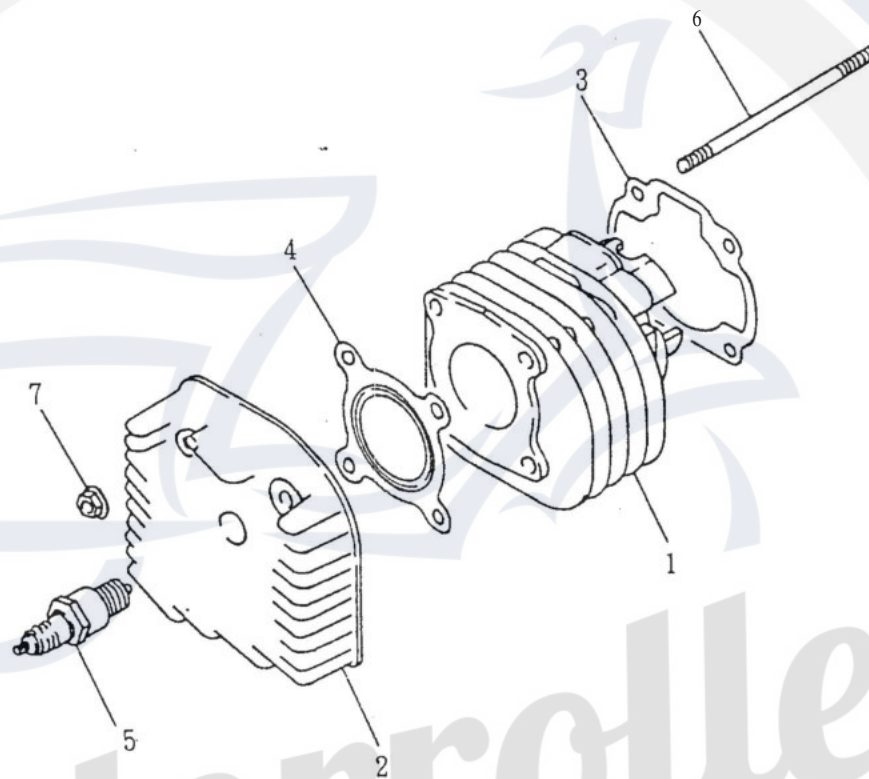


Motorroller.de
- seit 1993 -

FIG. 0 汽缸 CYLINDER

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	11111 -NAF-00	CYLINDER	汽缸	1		
2	11121^从-00	HEAD, cylinder	汽缸蓋	1		
3	11151-做?-00	GASKET,cylinder	汽缸墊片	1		
4	11181掀?-00	GASKET,cylinder head	汽缸蓋墊片	1		
5	62210^处-01	PLUG,spark (NGK BPR7HS)	火星塞總成	1		
6	94717-07109-0	BOLT, stud	雙頭螺栓	4		
7	95401-071007-0	NUT,flange	凸緣螺帽	4		


Motorroller.de
- seit 1993 -

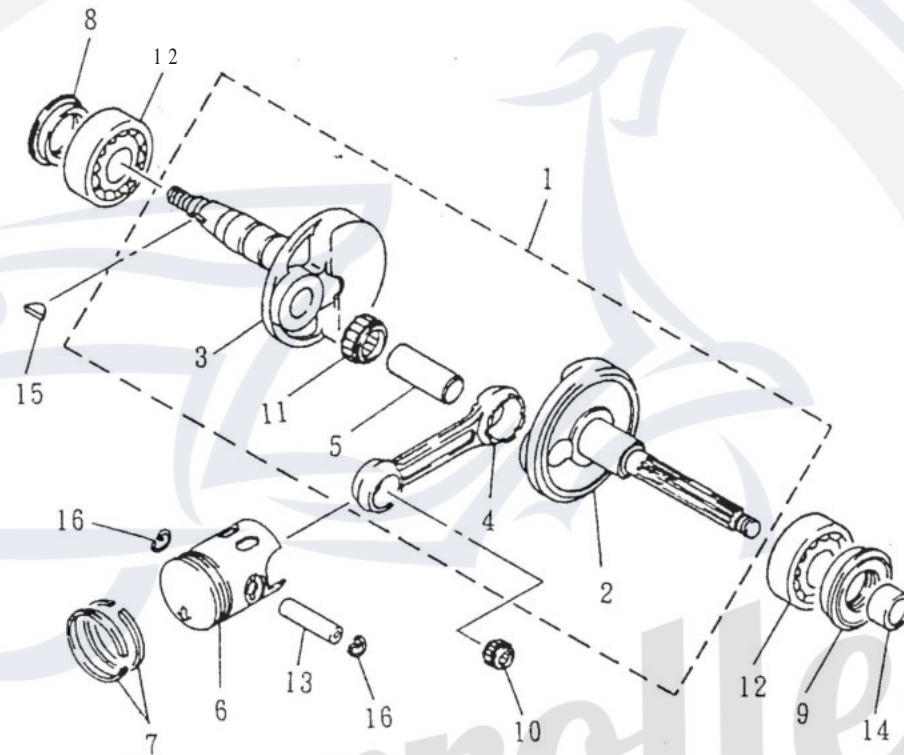

Motorroller.de
- seit 1993 -

FIG. 02 CRANKSHAFT.PISTON 曲轴.、活塞


NO.	PARTS NCX	PARTS NAME		Q'TY	PRICE	REMARK
1	11400-NAF-00	CRANKSHAFT ASSEMBLY	曲軸總成	1		
2	11412^△-00	.CRANK L	左曲軸	1		
3	11422-△-00	.CRANK R	右曲軸	1		
4	11451 -NAF-00	.ROD, connecting	連桿	1		
5	1148^NAF-00	.PIN,crank	曲軸銷	1		
6	11631-NAF■00	PISTON (STD)	活塞	1		
7	11636^00	PISTON RING SET (STD)	活塞環組	1		
8	93110-20306	OIL SEAL	油封	1		
9	93110-20428	OIL SEAL	油封	1		
10	93310-1014125	BEARING,needle roller	滾針軸承	1		
11	93310-1622118	.BEARING,needle roller	滾針軸承	1		
12	93320-204714	.BEARING,radial ball	滾珠軸承	2		
13	93510-051033	PIN,piston	活塞銷	1		
14	93510-152012	COLLAR	左曲軸隔環	1		
15	94420-03013	KEY,semicircle	半圓鍵	1		
16	97050-10012	CIRCLIP	活塞銷止動環	2		

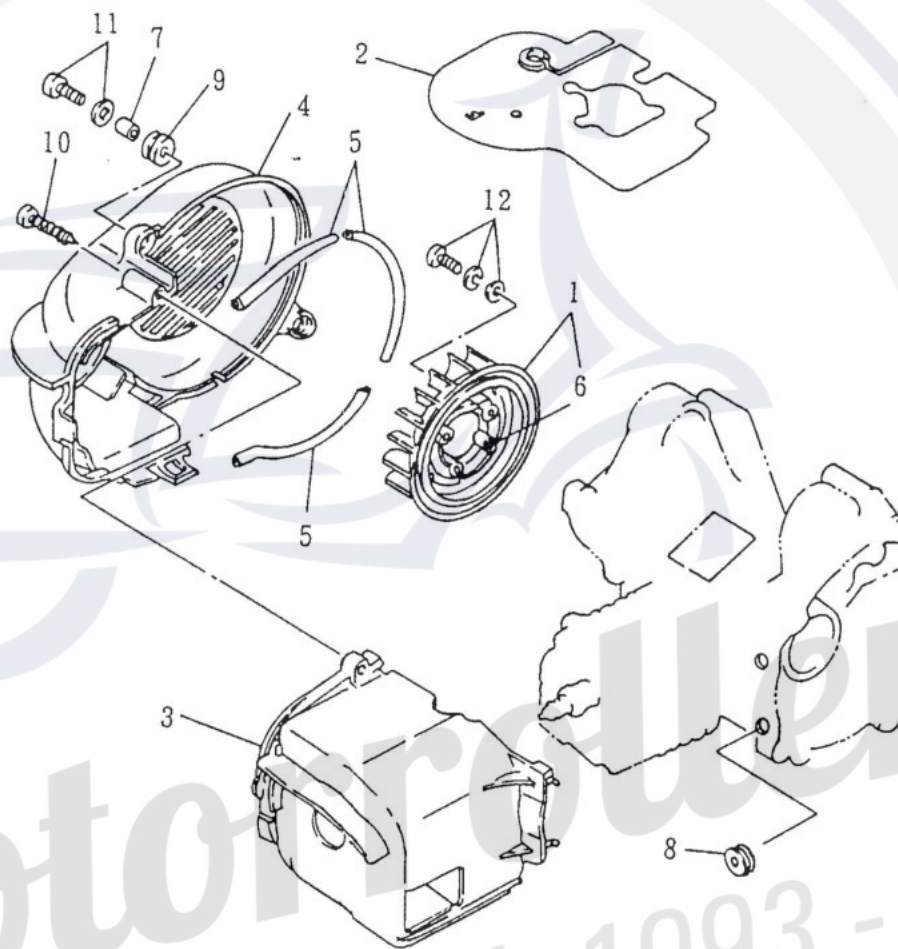

?10. 03 八爪SHROUD.FAN空氣進氣孔.風扇

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	12611-八爪-00	FAN	風扇	1		
2	12631-NAF-00	DEFLECTOR	轉折板	1		
3	12651-八爪-00	AIR SHROUD,cylinder	汽缸護罩	1		
4	12653-八爪-00	AIR SHROUD,fan	風扇護蓋	1		
5	12658-八爪-00	DAMPER,air shroud	風扇護蓋防震墊	3		
6	93560-68509	COLLAR	軸環	4		
7	93560-68510	COLLAR	軸環	2		
8	93580-41610	GROMMET	汽缸護罩套環	2		
9	93580-81610	GROMMET	套環	2		
10	9.6110-64016-0	SCREW,tapping	自攻螺絲	1		
11	96312-06020-八爪	SCREW,pan head with washer	十字孔頭螺絲附墊圈	2		
12	96314-06016-0	SCREW,pan head with washer	十字孔頭螺絲附墊圈	4		

Motorroller.de
- seit 1993 -

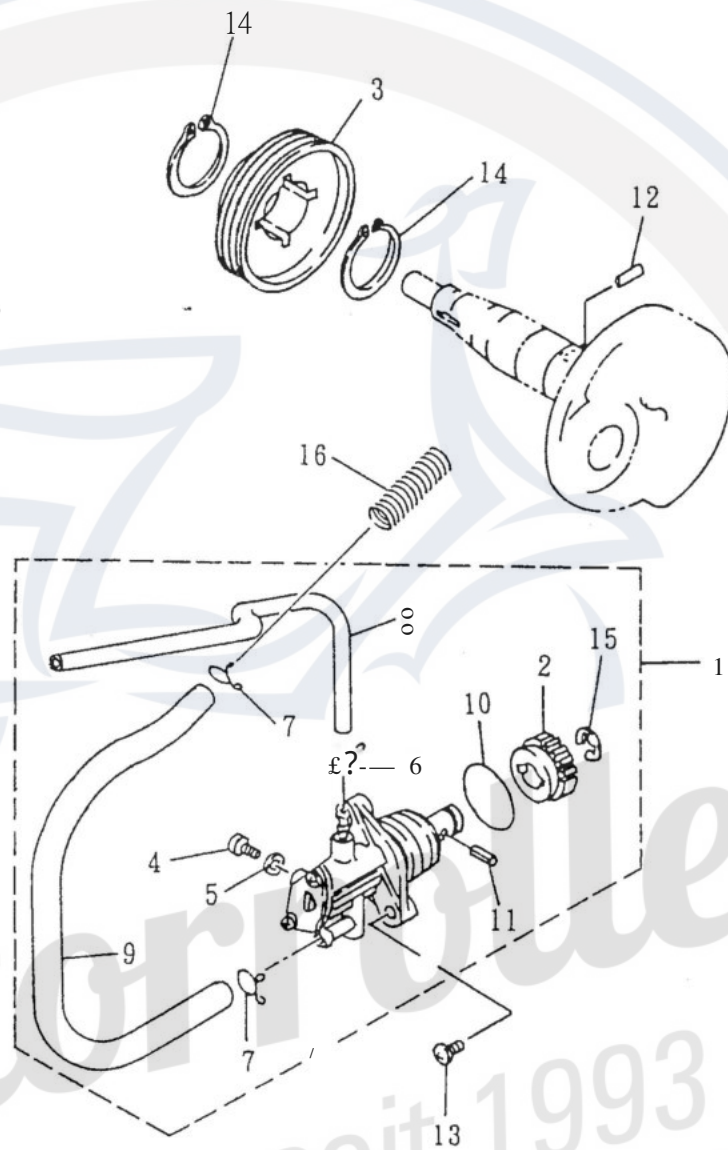

戸1& 04 01 潤滑油泵

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	13100^処-00	OIL PUMP ASSEMBLY	潤滑油泵總成	1		
2	1312傾八?-00	.GEAR WORM WHEEL (40T)	蝸輪	1		
3	13178^00	GEAR^pump drive	驅動齒輪	1		
4	13185»^処-00	•BOLT breather	螺栓	1		
5	13187^△00	.GASKET,breather bolt	墊圈	1		
6	90210-06005	.CLIP	管夾	1		
7	90210-08009	.CLIP	管夾	2		
8	90310-20050	.HOSE	耐油管	1		
9	90310-50090	.HOSE	耐油管	1		
10	93210-16195	.O-RING	護油圈	1		
11	94430-30012	.PIN, dowel	彈簧銷	1		
12	94510-30012	PIN,dowel	滾針	1		
13	96310-05014-0	SCREW ,pan head	十字孔頭螺絲	2		
14	97010-19012	CIRCLIP	C形扣環	2		
15	97011-07008	.CIRCLIP	£形扣環	1		
16	97501-08103	SPRING, compression	油管保護彈簧	1		



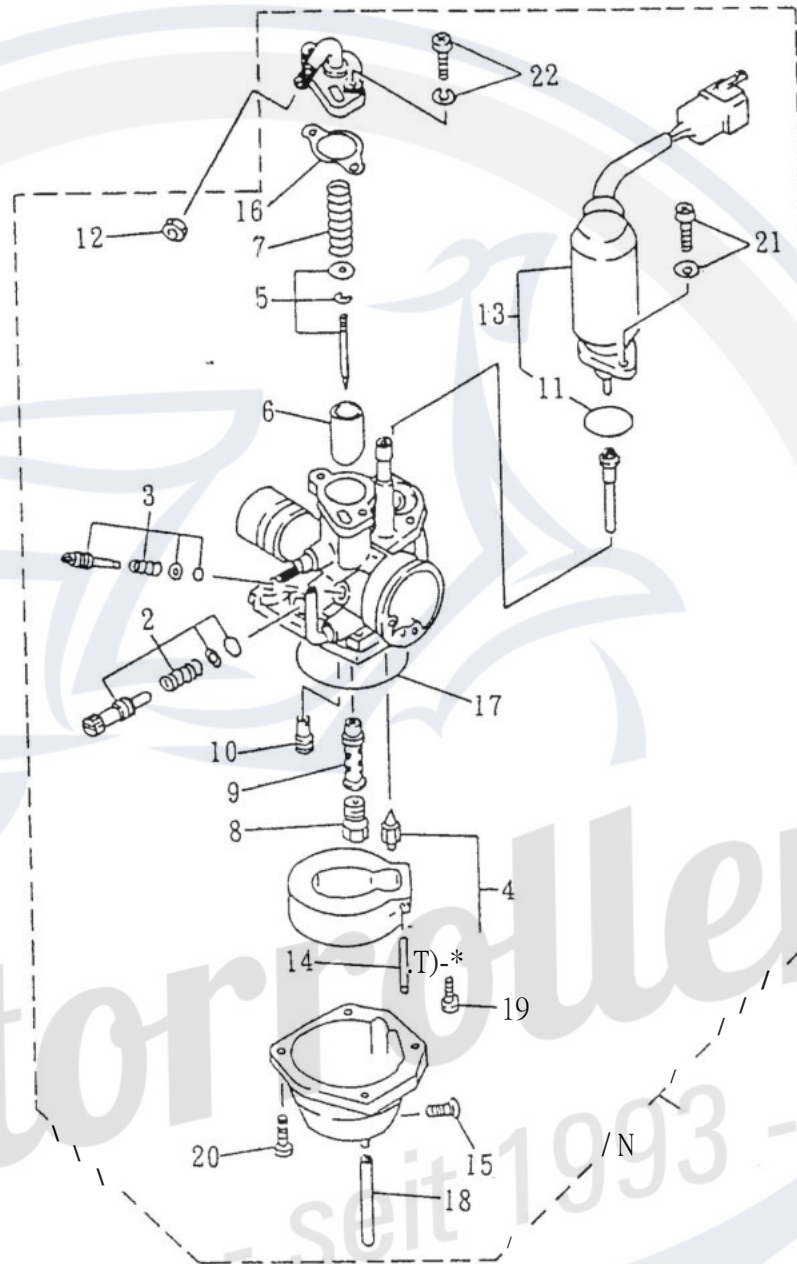


FIG. 05 CARBURETOR 化油器

撤	口从丁8撤	PARTS NAME		Q'TY	PRICE	REMARK
1	13201-VA-01	CARBURETOR ASSEMBLY	化油器總成	1		
2	13203-NAF-00	.THROTTLE SCREW SET	節流調整螺絲組	1		
3	13204-VA-00	.AIR SCREW SET	空氣螺絲組	1		
4	13207-財口00	.NEEDLE VALVE SET	汕門座油針組	1		
5	13211^A-00	.NEEDLE SET	油針組	1		
6	13212-VA-00	.VALVE,throttle	節流閥	1		
7	13233-NAF-00	.SPRING,throttle stop	節流閥彈簧	1		
8	13240-NAF-01	•JET main (#55)	主噴口	1		
9	13241-NAF-00	.NOZZLE,main	主噴嘴	1		
10	13242^A-01	.JET,pilot (#20)	引導噴口	1		
11	13247^A-00	.O-RING	護油圈	1		
12	13261^A-00	.NUT,cable adjusting	螺帽	1		
13	1327^A-NAF-00	.PLUNGER, starter	起動阻塞總成	1		
14	13286^A00	•PIN, float	浮筒銷	1		
15	13291-VA-00	.PLUG,drain	排洩口塞	1		
16	13296-NAF-00	.GASKET	墊片	1		
17	13297-NAF-00	.SEAL	封圈	1		
18	13298-NAF-00	•PIPE	管	1		
19	96310-03006-0	.SCREW,pan head	十字孔頭螺絲	1		
20	96310-04012-0	.SCREW,pan head	十字孔頭螺絲	4		
21	96312-04008-0	.SCREW,pan head with washer	十字孔頭螺絲附墊圈	2		

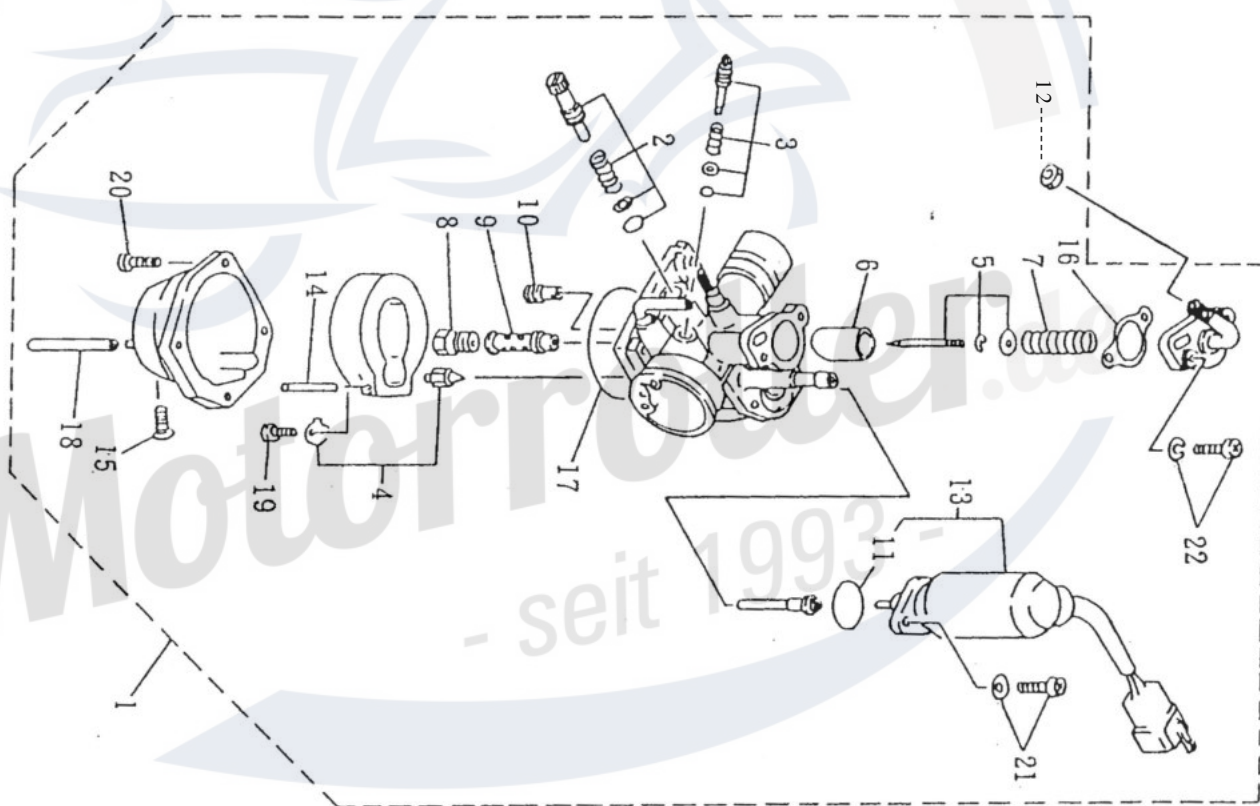

Aktuelle Preise erfahren sie auf www.motorroller.de

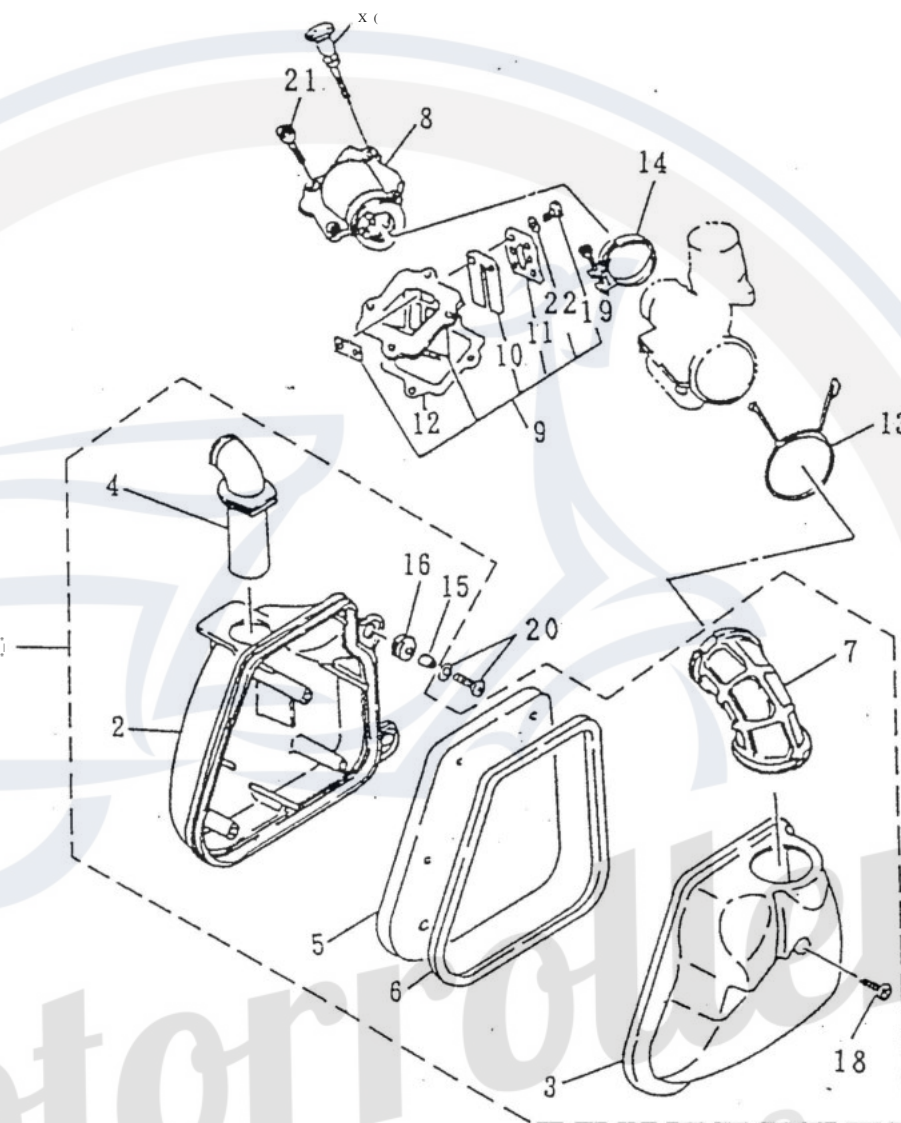

100*

FIG. 06 INTAKE 空氣吸入口

肌	PARTS 肌	PARTS NAME		Q'TY	PRICE	REMARK
1	13410->^00	AIR CLEANER ASSEMBLY	空氣濾清器總成	1		
2	13411-~处-01	CASE,air cleaner	空氣濾清器箱	1		
3	13412抛口-00	CAP,cleanser case	空氣濾清器箱蓋	1		
4	134371^00	DUCT	防塵管	1		
5	13451-贝才口-00	ELEMENT,air cleaner	空氣濾清網	1		
6	13452_\处-00	SEAL	濾清箱封圈	1		
7	13453-NAF-00	JOINT, air cleaner	濾清箱接頭	1		
8	13555-\处-00	MANIFOLD,intake	進氣歧管	1		
9	13610-NAF-00	REED VALVE ASSEMBLY	簧片閥總成	1		
10	13613^00	.REED, valve	簧片閥	2		
11	13616«^00	.STOPPER^reed valve	簧片閥停止器	2		
12	13621-NAF-00	GASKET, valve seat	閥座墊片	1		
13	90210-20043	CLIP	管夾	1		
14	90260-13325	CLANP,hose	軟管夾	1		
15	93560-68510	COLLAR	軸環	2		
16	93580-81610	GROMMET	套環	2		
17	94710-06020^	BOLT	可斷頭螺栓	1		
18	96110-52512^	SCREW,tapping	自攻螺絲	3		
19	96310-03008-6	.SCREW,pan head	十字孔頭螺絲	4		
20	96312-06020^	SCREW,pan head with washer	十字孔頭螺絲附墊圈	2		
21	96510-06020^	BOLT,socket	六角承窩螺栓	3		

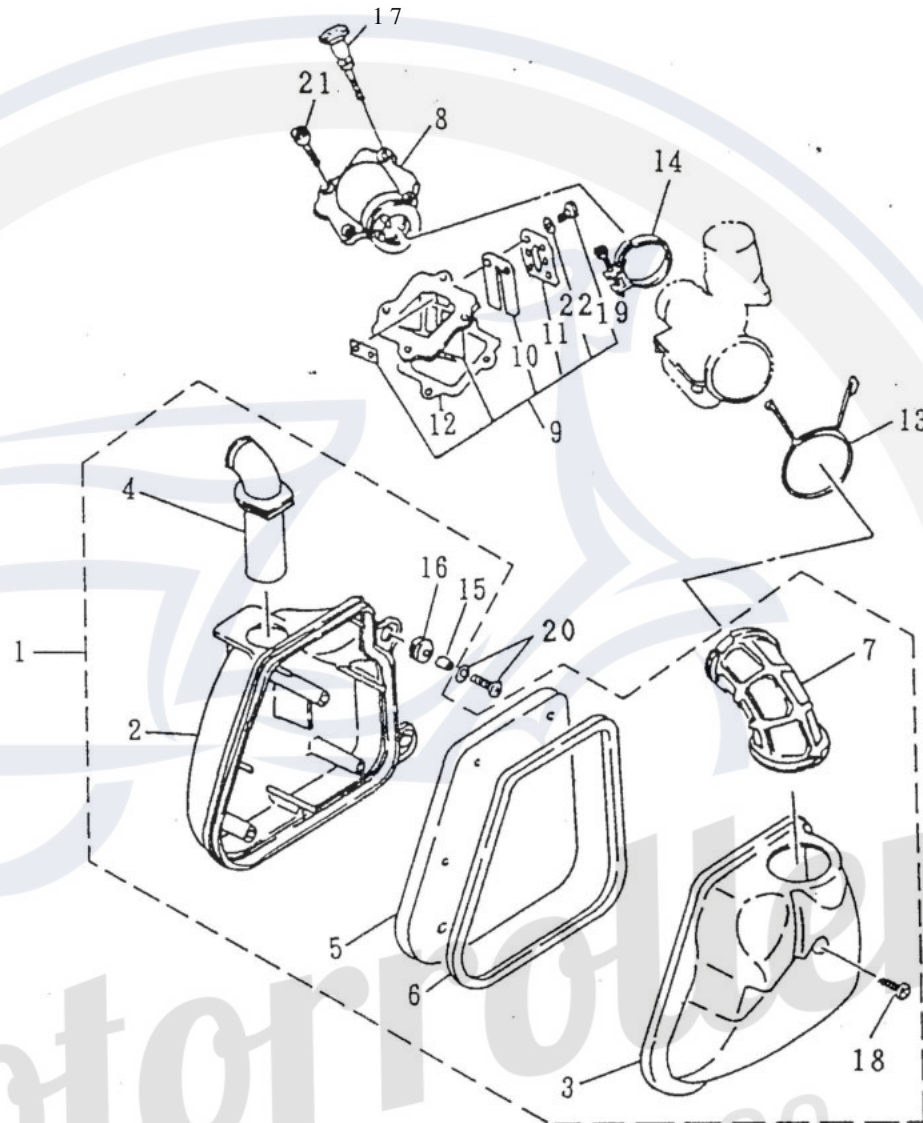


FIG. 06 INTAKE 空氣吸入口

NO.	PARTS NO.	PARTS NAME	Q'TY	PRICE	REMARK
22	97301-030507-B	.WASHER, spring	4		彈簧墊圈

Motorroller.de
- seit 1993 -

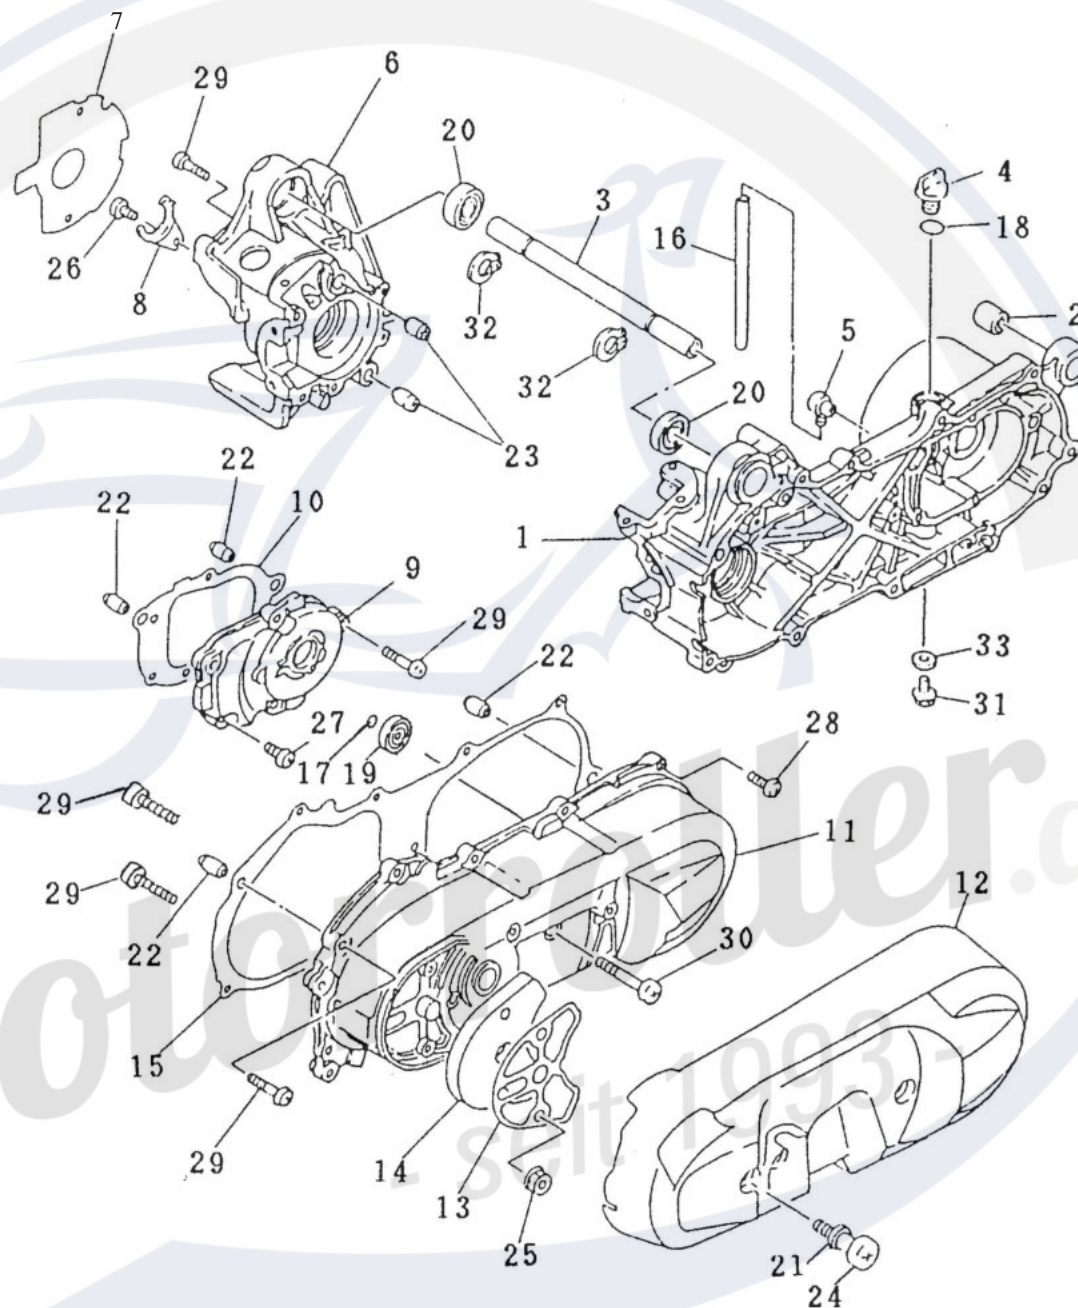


FIG. 07 CRANKCASE 曲軸箱

祖	口从丁8肌	PARTS NAME		Q'TY	PRICE	REMARK
1	15111-丫,00	CRANKCASE,left	左曲軸箱	1		
2	15116小处-00	BUSH,rear shock absorber	後緩衝器襯套	1		
3	15117^^00	SPACER,engine mount	曲軸箱固定軸	1		
4	15163-NAF-00	PLUG,oil	油標塞	1		
5	15171^处-00	BREATHER	通風管接頭	1		
6	15211-丫八口-00	CRANKCASE,right	右曲軸箱	1		
7	15221*^^00	GASKET,stator	電盤墊片	1		
8	15228-\\处-00	HOLDER	油封固定座	1		
9	15311-丫姚00	COVER^gearbox	變速箱蓋	1		
10	15351-丫勝00	GASKET,gearbox cover	變速箱蓋墊片	1		
11	15411-丫肋00	COVER, crankcase	機箱蓋	1		
12	15421-丫^00	COVER CRANKCASE	機箱蓋防護罩	1		
13	15432-丫_00	GUIDE,element	濾網導件	1		
14	15436-丫肋00	ELEMENT	曲軸箱濾清網	1		
15	15481-丫勝00	GASKET,crankcase cover	機箱蓋墊片	1		
16	90311-50070	HOSE,breather	透明管	1		
17	93210-24140	O-RING	護油圈	1		
18	93210-31080	O-RING	護油圈	1		
19	93320-0828092	BEARING,radial ball	滾珠軸承	1		
20	93320-1735101 ;	BEARING,radial ball	滾珠軸承	2		
21	93580-61509	GROMMET	套環	2		

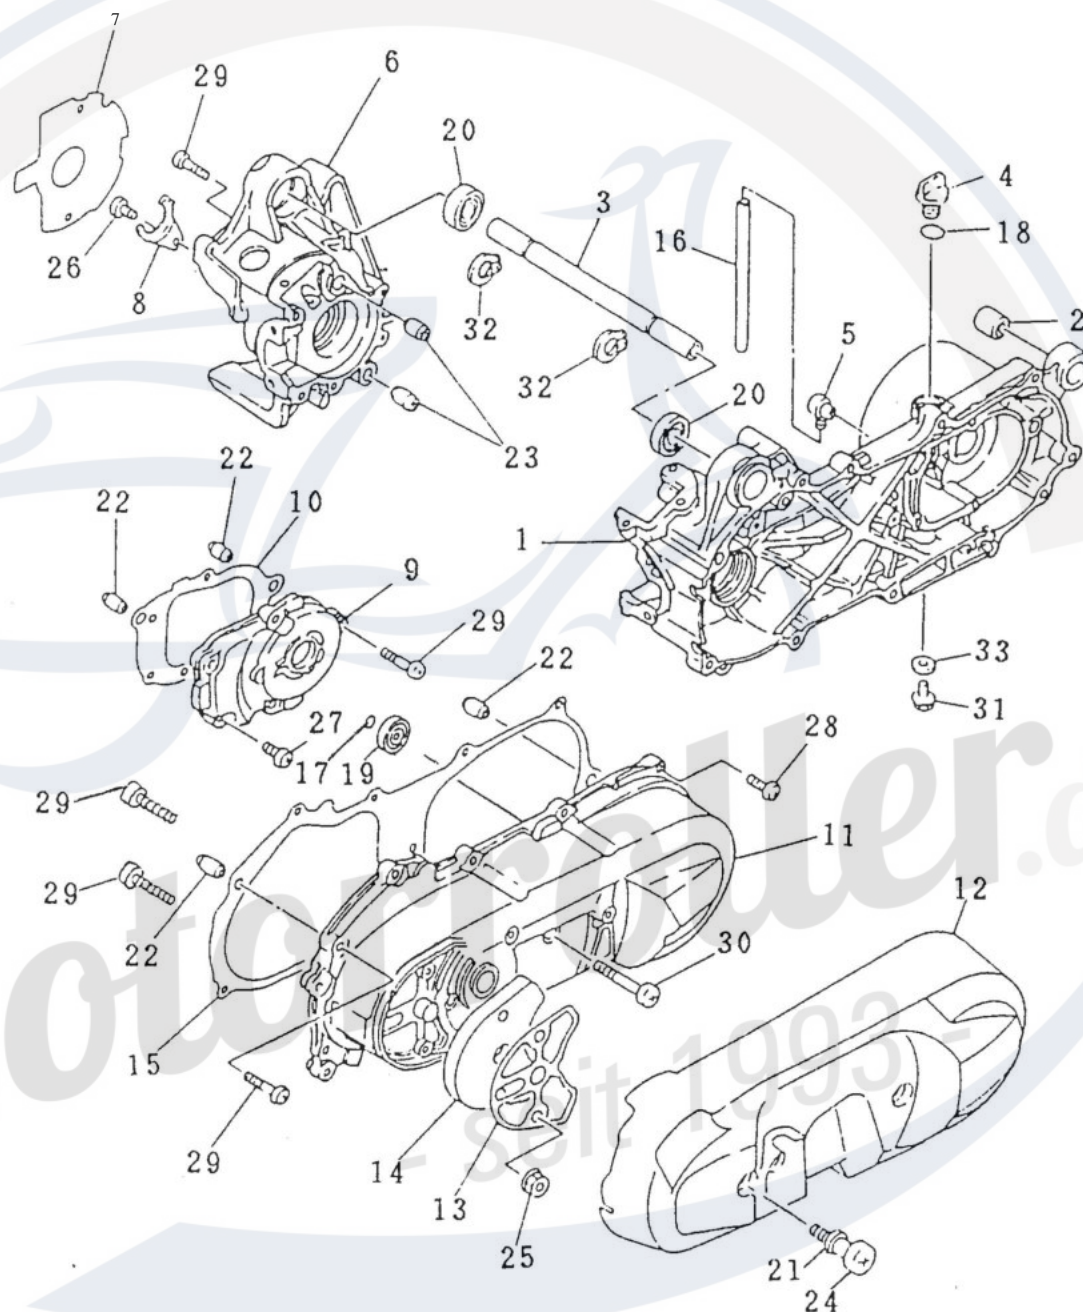


FIG. 07 CRANKCASE _箱

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
22	94410-10014	PIN, dowel	定位銷	4		
23	94410-12016	PIN, dowel	定位銷	2		
24	94706-06023^	BOLT	防護罩螺栓	2		
25	95401-061006-0	NUT, flange	凸緣螺帽	3		
26	96310-06012-0	SCREW, pan head	十字孔頭螺絲	1		
27	96310-060204	SCREW, pan head	十字孔頭螺絲	3		
28	96310-06025-6	SCREW, pan head	十字孔頭螺絲	8		
29	96310-06035-6	SCREW, pan head	十字孔頭螺絲	12		
30	96310-06065-6	SCREW, pan head	十字孔頭螺絲	1		
31	96414-08016-0	BOLT, flange	凸緣螺栓	1		
32	97010-17010	CIRCLIP	(: 形扣環	2		
33	97230-081512	WASHER^copper	銅墊圈	1		

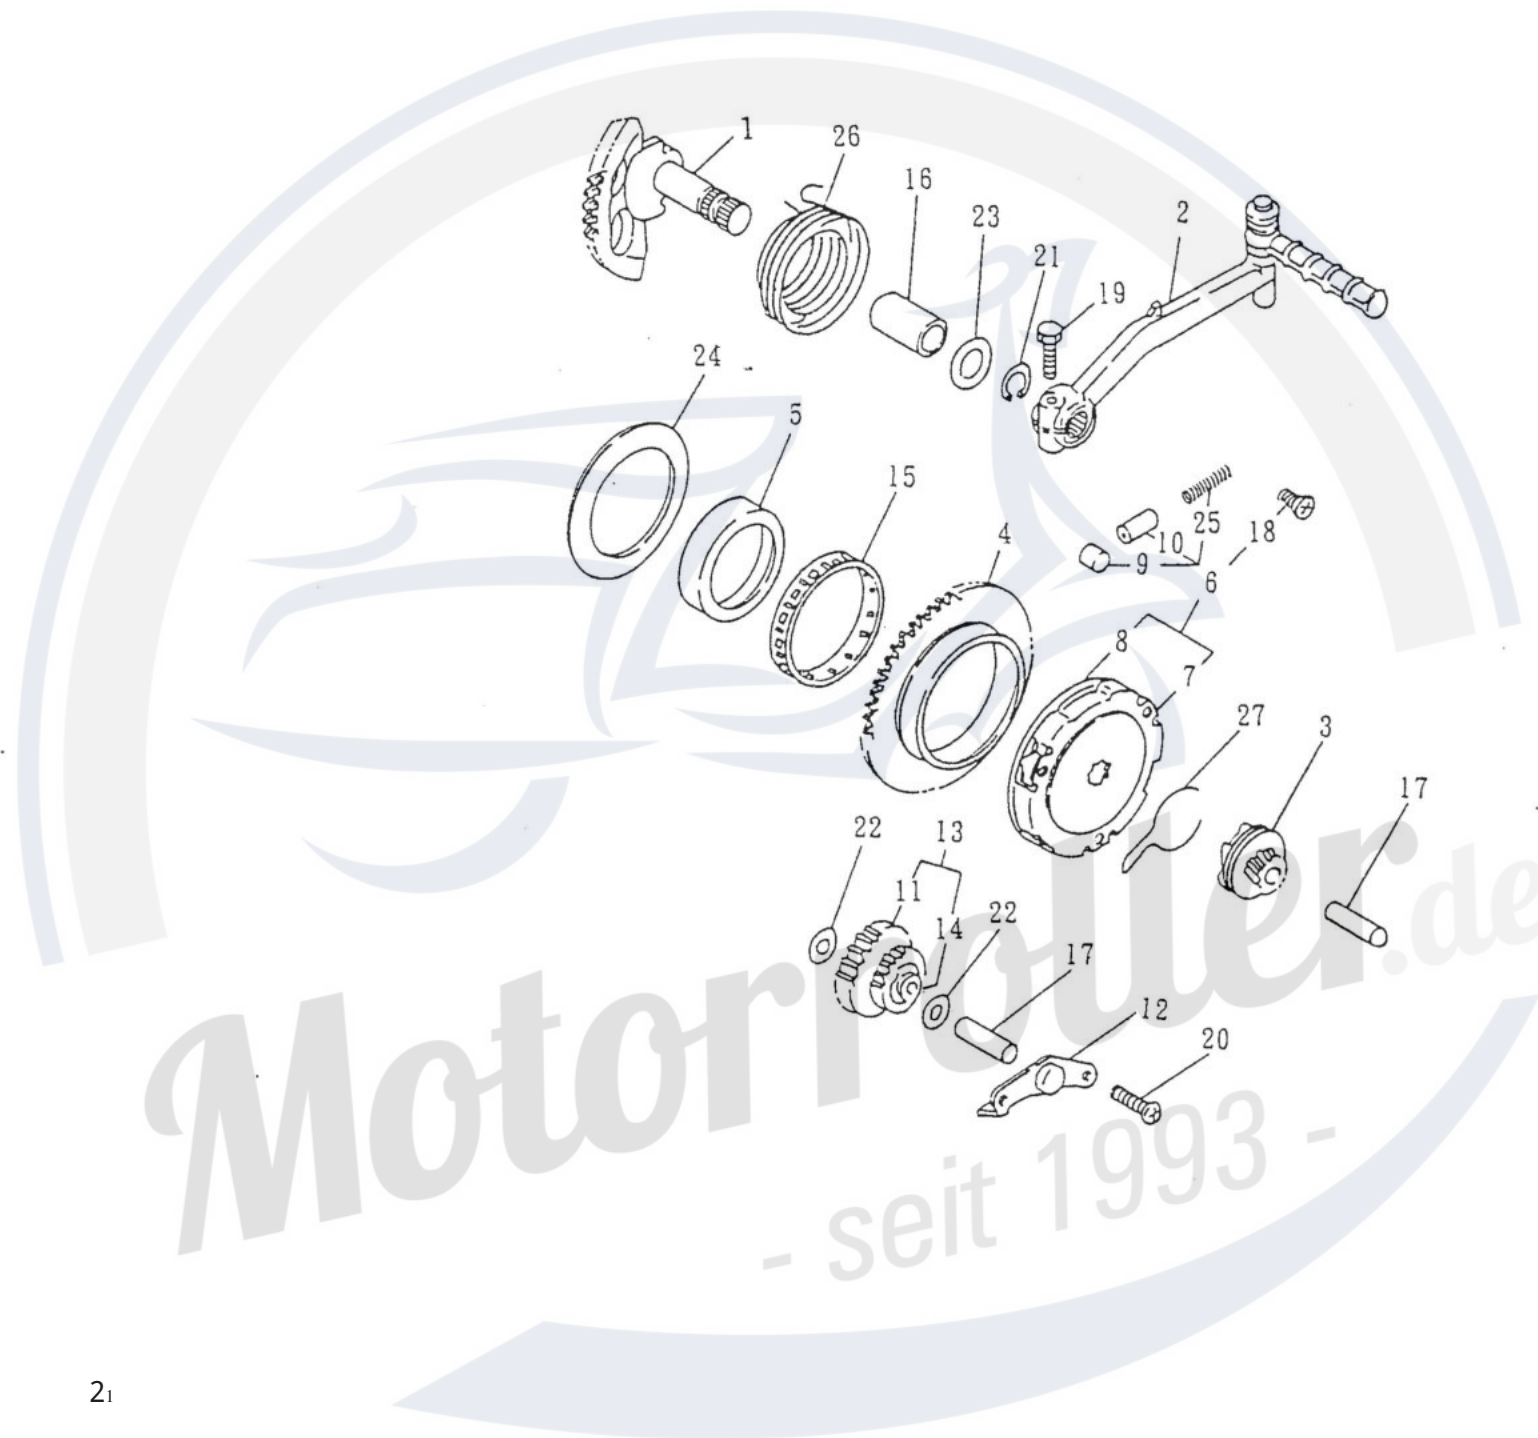


FIG. 08 STARTER 起動機構

月凡	PARTS 月凡	PARTS NAME		Q 'TY	PRICE	REMARK
1	2260 ₁ - 丫 月办00	KICK SHAFT ASSEMBLY	腳踩軸總成	1		
2	22620-丫也00	KICK CRANK ASSEMBLY	腳踩柄總成	1		
3	22630-NAF-00	KICK PINION ASSEMBLY	腳踩小齒輪總成	1		
4	23524-NAF-00	WHEEL,starter	起動輪	1		
5	23538-NAF-00	BOSS,gear	齒輪轂	1		
6	2357 («^00	STARTER CLUTCH ASSEMBLY	起動離合器總成	1		
7	2357 2^00	STARTER CLUTCH, fixed	起動離合器固定片	1		
8	2357 4-NAF-00	STARTER CLUTCH, stand	起動離合器塑膠座	1		
9	2357 6^1 ^0 ₁	STARTER CLUTCH, roller	起動離合器滾珠	3		
10	2357 8 - 丫又人-00	STARTER CLUTCH, scover	起動離合器彈簧套	3		
11	2361 2- 丫以厂00	IDLE GEAR	惰齒輪	1		
12	23632-NAF-00	PLATE, idle gear	惰齒輪板	1		
13	2365 (^又人-00	IDLE GEAR ASSEMBLY	惰齒輪總成	1		
14	9 33 ₁ 0-0 ₈ 1 2 ₁ 00	BEARING, needle roller	滾針軸承	1		
15	9 33 ₁ 0-555 ₉ 1 2 ₇	BEARING, needle roller	滾針軸承	1		
16	9 35 ₁ 0-1 52030	BUSHING, kick shaft	腳踩軸襯套	1		
17	9 45 ₁ 0-8 0032	SHAFT, gear	齒輪軸	2		
18	9 6 ₁ 04-5 ₁ 0 ₁ 6-0	SCREW, tapping	自攻螺絲	3		
19	9 62 ₁ 0-06025^	BOLT, hexagon	六角螺栓	1		
20	9 63 ₁ 0-060 ₁ 2-0	SCREW, pan head	十字孔頭螺絲	2		
21	9 7 0 ₁ 0-1 50 ₁ 0	CIRCLIP	< : 形扣環	1		

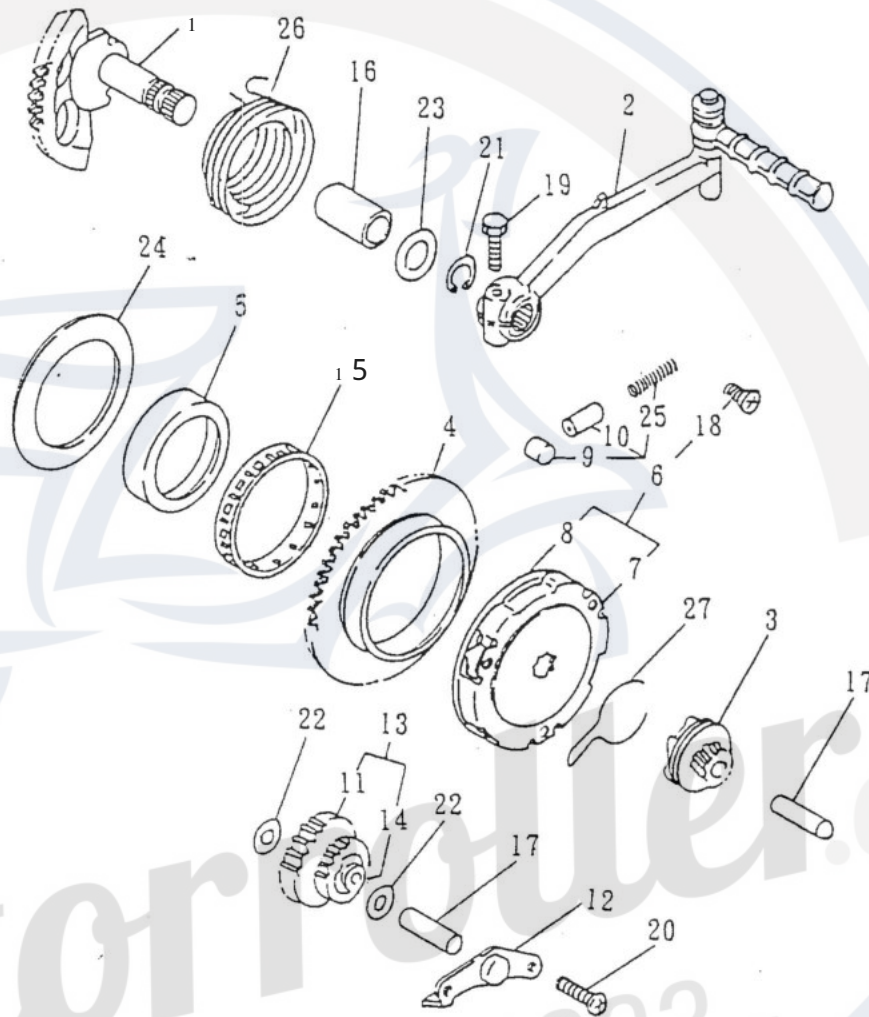


FIG. 08 STARTER 起動機構

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
22	97201-081620-0	WASHER,plate	平 面 墊 圈	2		
23	97201-152810^	WASHER^plate	平 面 墊 圈	1		
24	97201-557606	WASHER^plate	起 動 輪 襯 片	1		
25	97501-02021	STARTER CLCTCH'spring	起 動 離 合 器 彈 簧	3		
26	97508-32535	SPRING,torsion	腳 踩 軸 扭 轉 彈 簧	1		
27	97510-26300	CLIP, spring	彈簧夾 1			

Motorroller.de
- seit 1993 -

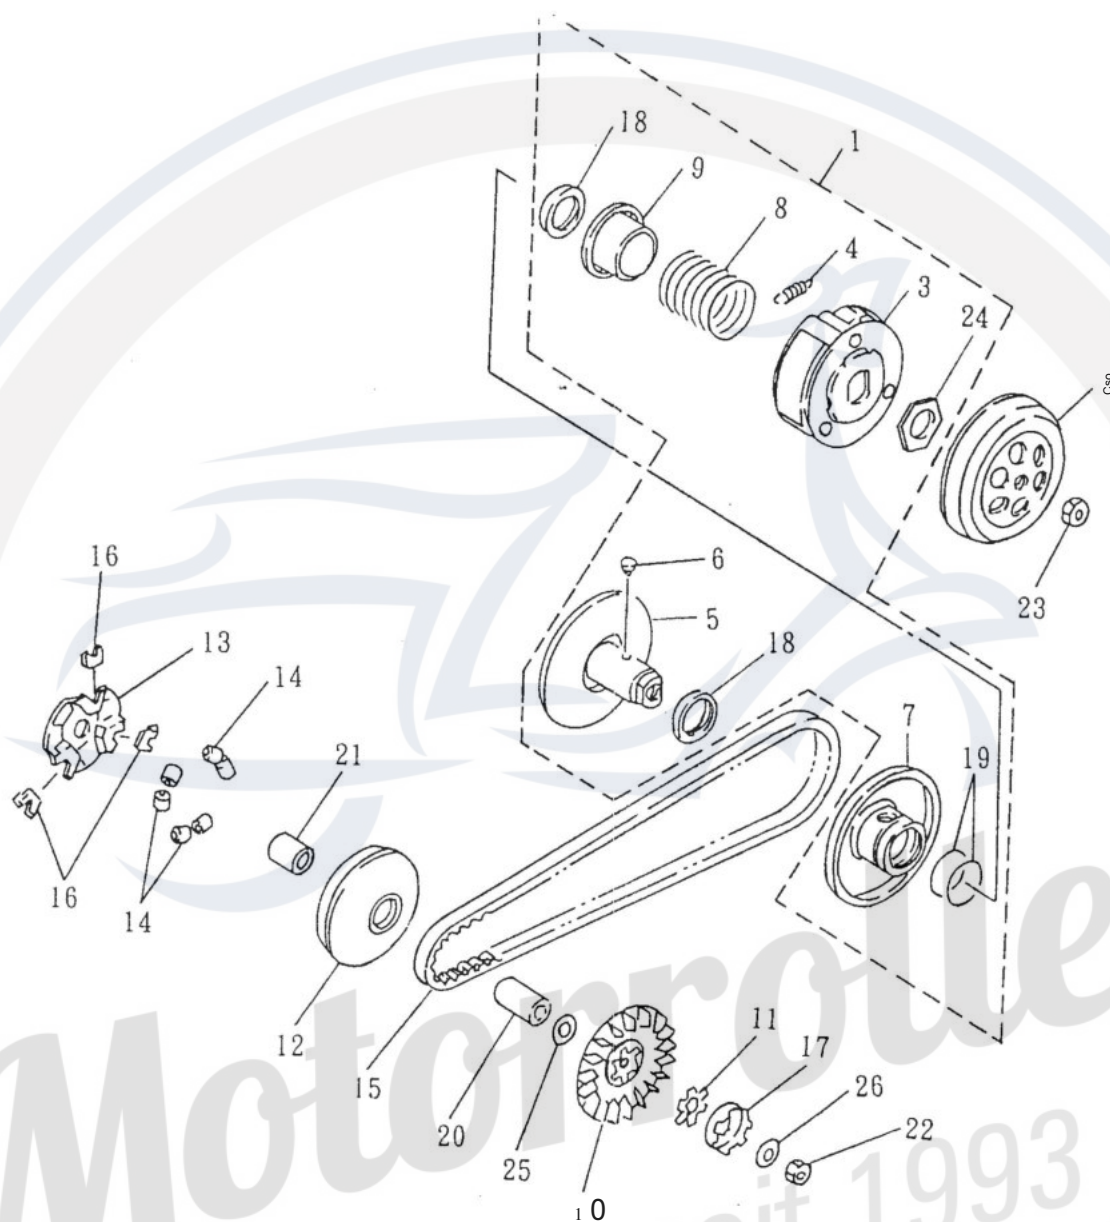


FIG. 09 CLUTCH 離合器

月凡	口人丁	8言兒	PARTS NAME		QTY	PRICE	REMARK
1	25602-	NAF-00	SECONDARY SHEAVE ASSEMBLY	副槽輪總成	1		
2	2561^	々人-00	CLUTCH HOUSING COMP	離合器殼整體	1		
3	25620-	NAF-00	.CLUTCH CARRIER ASSEMBLY	離合器牽轉具總成	1		
4	25626^	00	.SPRING,clutch weight	離合器重量彈簧	3		
5	25660-	NAF-00	.SECONDARY FIXED SHEAVE COMP	副固定槽輪	1		
6	25664-	ノノ1^00	.PIN,guide	導銷	2		
7	25670-	NAF-00	.SECONDARY SLIDING SHEAVE	副滑動槽輪	1		
8	25680-	NAF-00	.SPRING,compression	壓縮彈簧	1		
9	25684-	々人-00	.SEAT,secondary spring	副彈簧座	1		
10	25711-	々人-00	SHEAVE,primary fixed	主固定槽輪	1		
11	25716,	々人-00	WASHER,claw	鉗墊圈	1		
12	25721-	貝占?-00	PRIMARY SLIDING SHEAVE	主滑動槽輪	1		
13	25723-	NAF-00	CAM,plate	凸輪板	1		
14	25732^	00	WEIGHT ROLLER	重錘滾子	6		
15	257411	々人-00	V-BELT	皮帶	1		
16	25753^	00	SLIDER	滑件	3		
17	25757-	々人-00	CLUTCH,one way	單向離合器	1		
18	93110-	33394	.OIL SEAL	油封	2		
19	93210-	20360	.O-RING	護油圈	2		
20	93510-	131838	BUSHING,sliding clutch	主滑動槽輪襯套	1		
21	93510-	182322	BUSHING,sliding sheave	主滑動槽輪銅襯套	1		

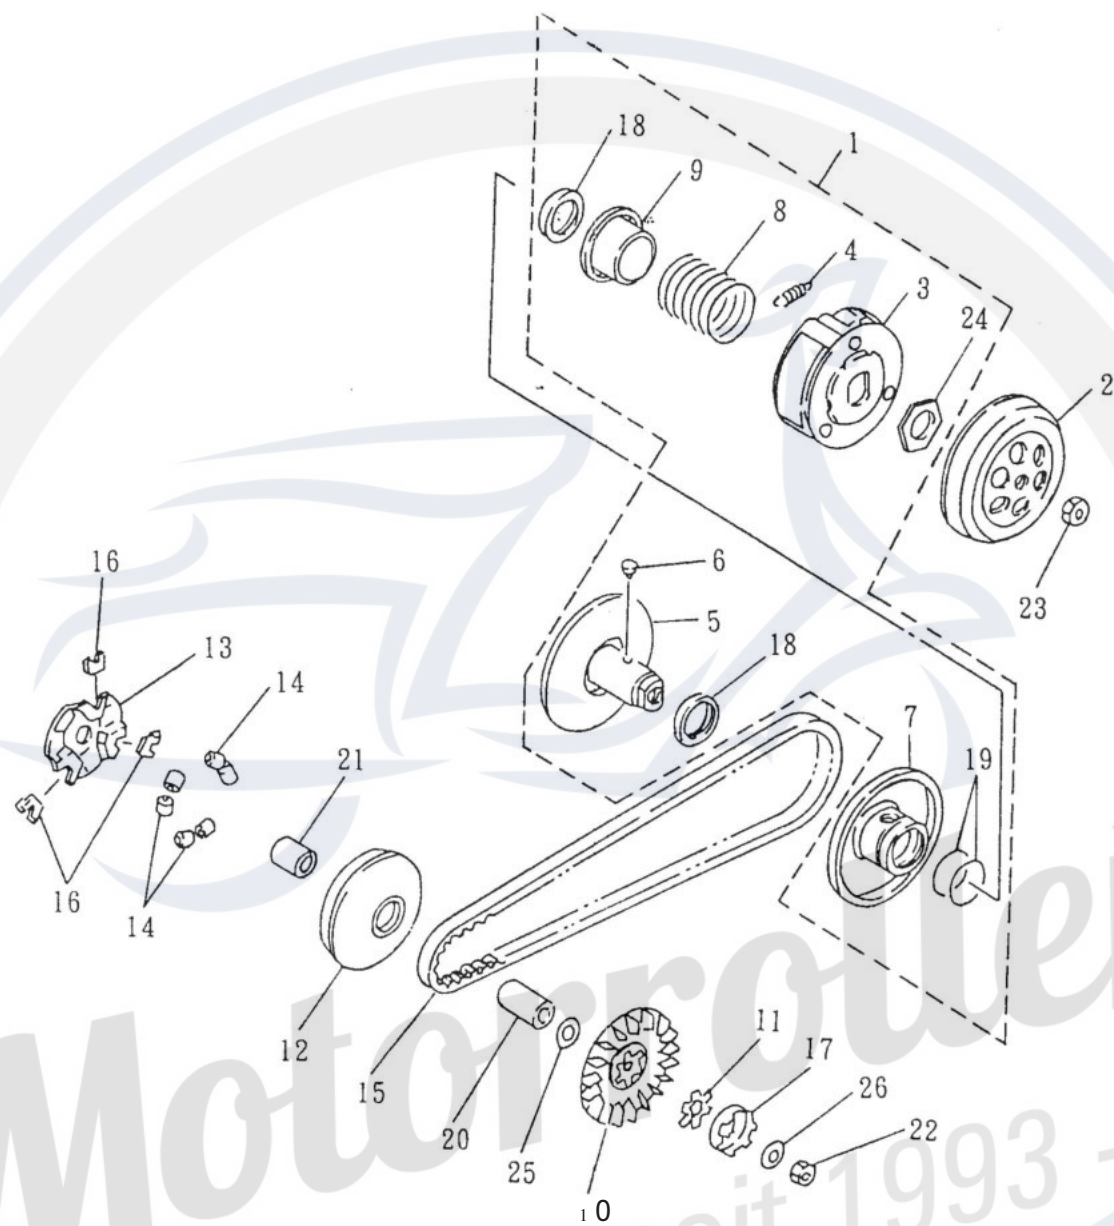


FIG. 09 CLUTCH 離合器

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
-----	-----------	------------	--	------	-------	--------

22	95201-101708-0	NUT,hexagon	六角螺帽	1		
23	95201-102406-0	NUT,hexagon	六角螺帽	1		
24	95201-284004-0	• NUT , hexagon	六角螺帽	1		
25	97201-131810	WASHER^plate	平面墊圈	1		
26	97310-102425	WASHER, conical spring	錐形彈簧墊圈	1		

Motorroller.de
- seit 1993 -

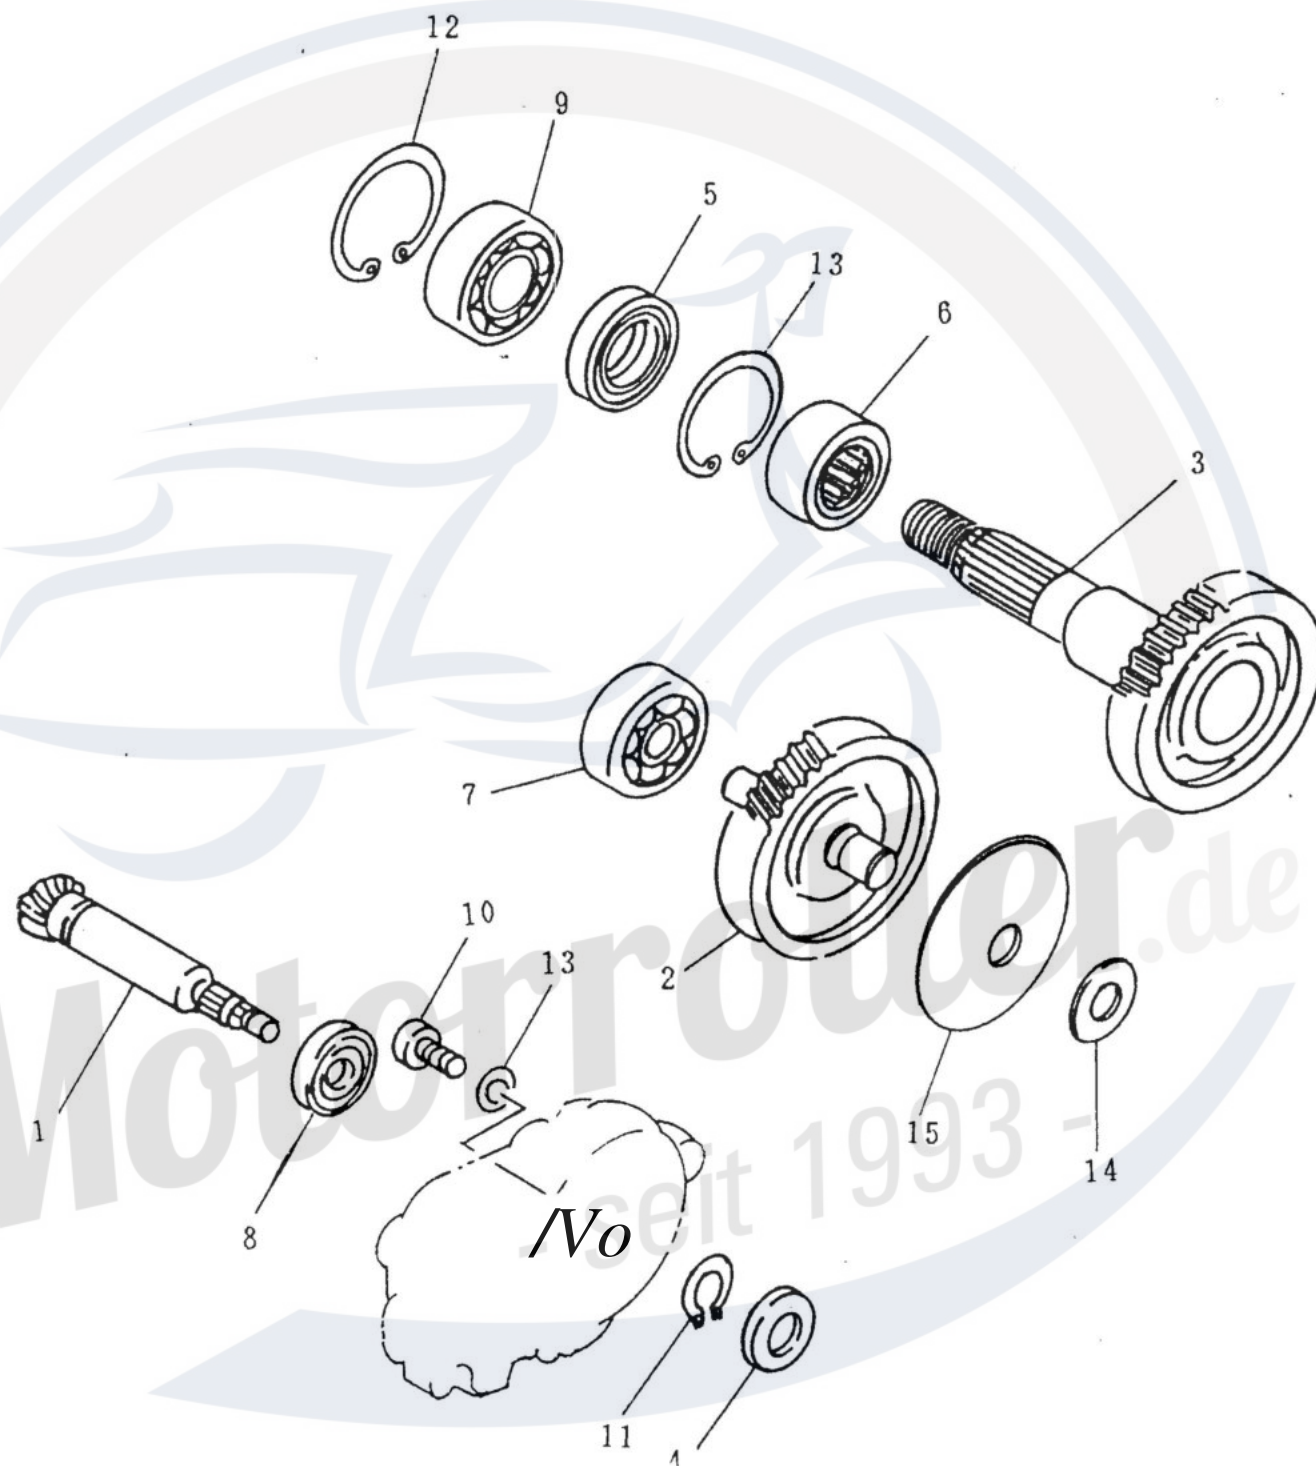


FIG. 10 TRANSMISSION 傳動機構

月凡	PARTS 零件	PARTS NAME		Q	TY	PRICE	REMARK
1	26111- Y 処-00	GEAR,primary drive (13T)	主驅動軸	1			
2	26410- Y 処-00	MAIN AXLE COMP (48/12T)	惰輪軸總成	1			
3	26420- Y 仕也00	DRIVE AXLE ASSEMBLY (36T)	傳動軸總成	1			
4	93110-17285	OIL SEAL	-	1			
5	93110-25356	OIL SEAL	油封	1			
6	93310-2533160	BEARING,needle roller	滾針軸承	1			
7	93320-123210	BEARING,radial ball	滾珠軸承	1			
8	93320-173510	BEARING radial ball	滾珠軸承	1			
9	93320-20421211	BEARING,radial ball	滾珠軸承	1			
10	96310-06010-6	SCREW pan head	十字孔頭螺絲	1			
11	97010-17010	CLRCLIP	(:形扣環	1			
12	97012-42018	CIRCLIP	0形內扣環	1			
13	97013-33012	CIRCLIP	<:形內扣環	1			
14	97201-061910	WASHER,plate	平面墊圈	1			
15	97201-122210	WASHER ^plate	平面墊圈	1			
16	97310-126005	WASHER,conical spring	錐形彈簧墊圈	1			


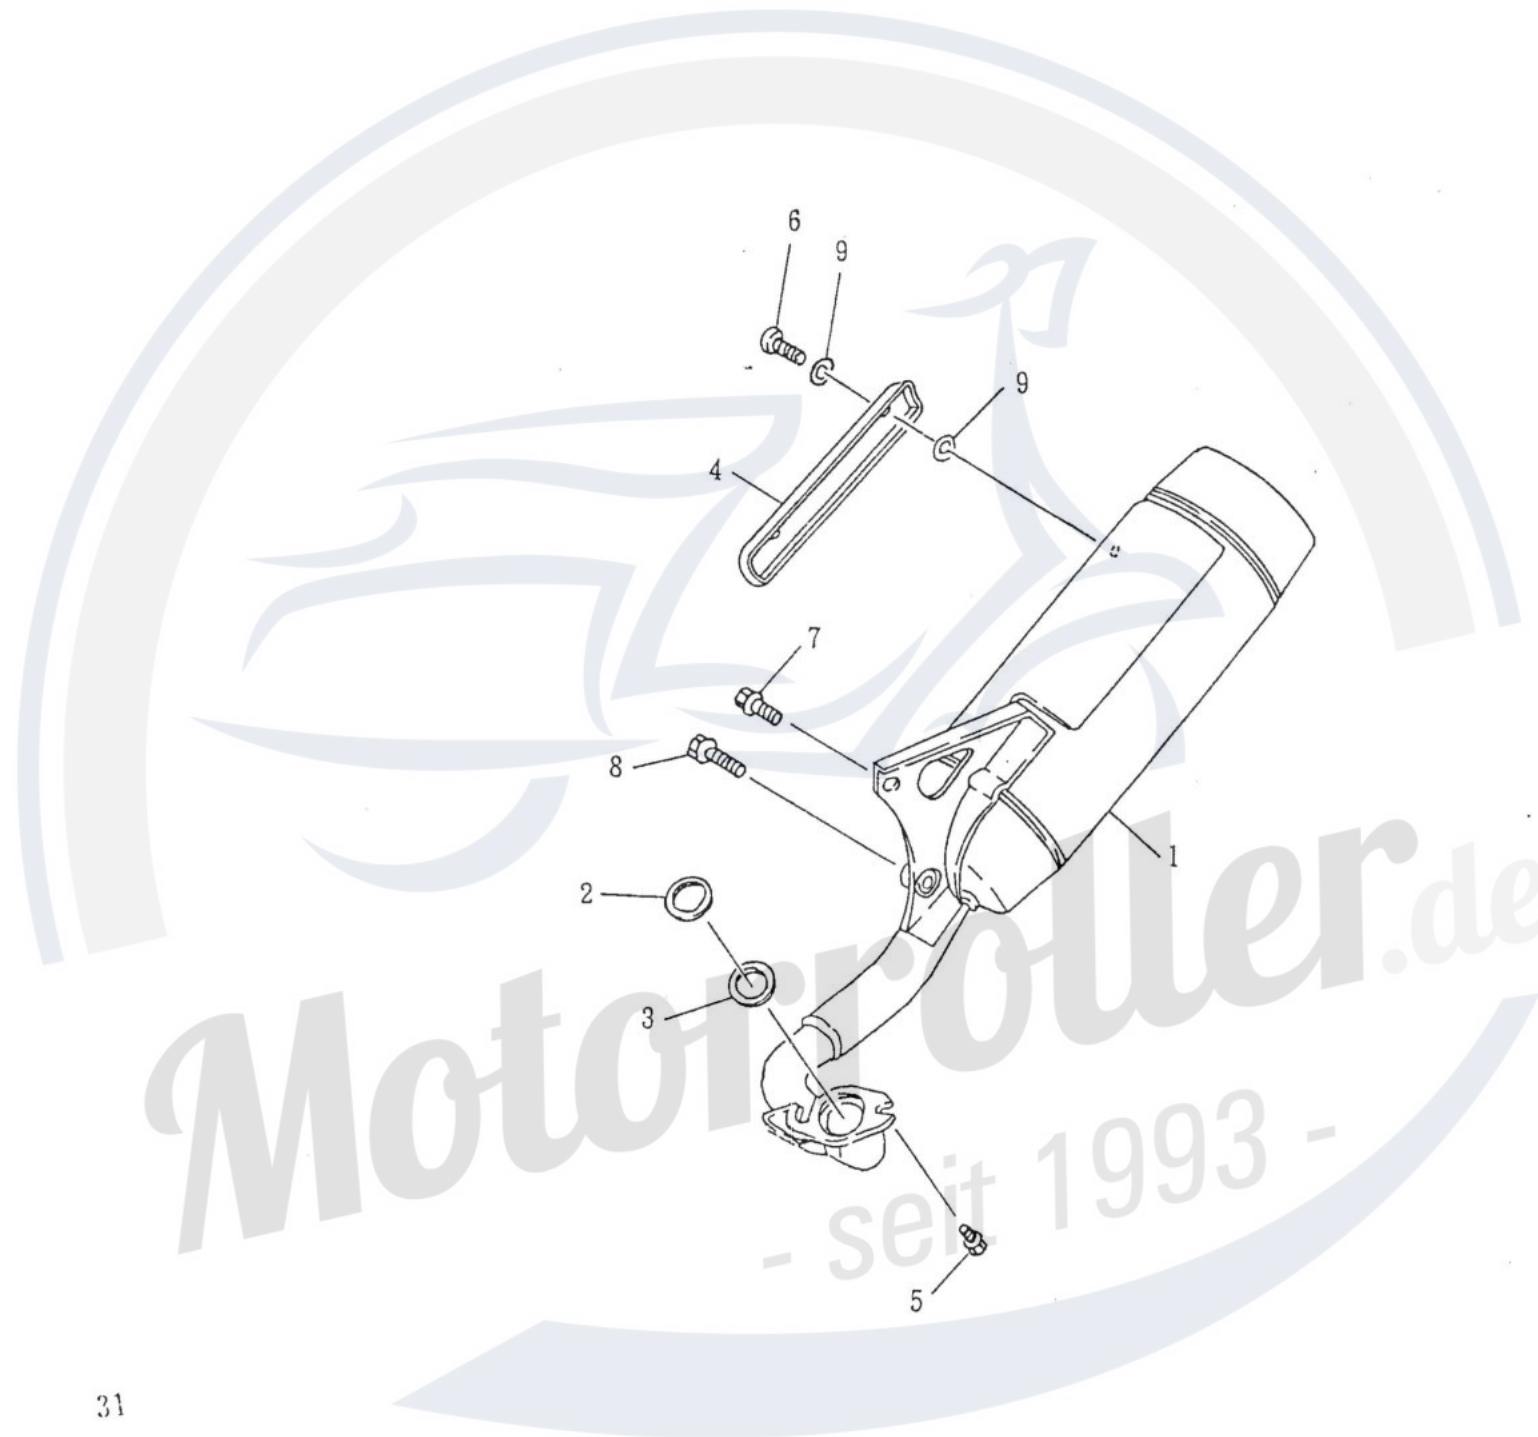


FIG. 11 EXHAUST 排氣管

NO.	PARTS NO.	PARTS NAME	Q'TY	PRICE	REMARK
1	31 61 0-N JF -00	EXHAUST PIPE ASSEMBLY			排氣管總成
2	31 61 3-N A F -00	GASKET,exhaust pipe (25.4*34*4)	1		排氣管墊片
3	31 61 5-N A F -01	PIPE,reduction (012)	1		減速管
4	31 61 8-月良二-00	DIAPHRAGM, muffler	1		消音筒護罩
5	9471 4-0601 8-0	SCREW, flange	2		十字孔凸緣螺絲
6	9631 6-0601 0-6	SCREW, pan head	2		十字孔頭螺絲
7	9641 4-08 020-1^	BOLT, flange	1		凸緣螺栓
8	9641 4-08 030^	BOLT, flange	1		凸緣螺栓
9	9721 0-061 21 5	WASHER, plate	4		石棉墊圈

Motorroller.de
- seit 1993 -

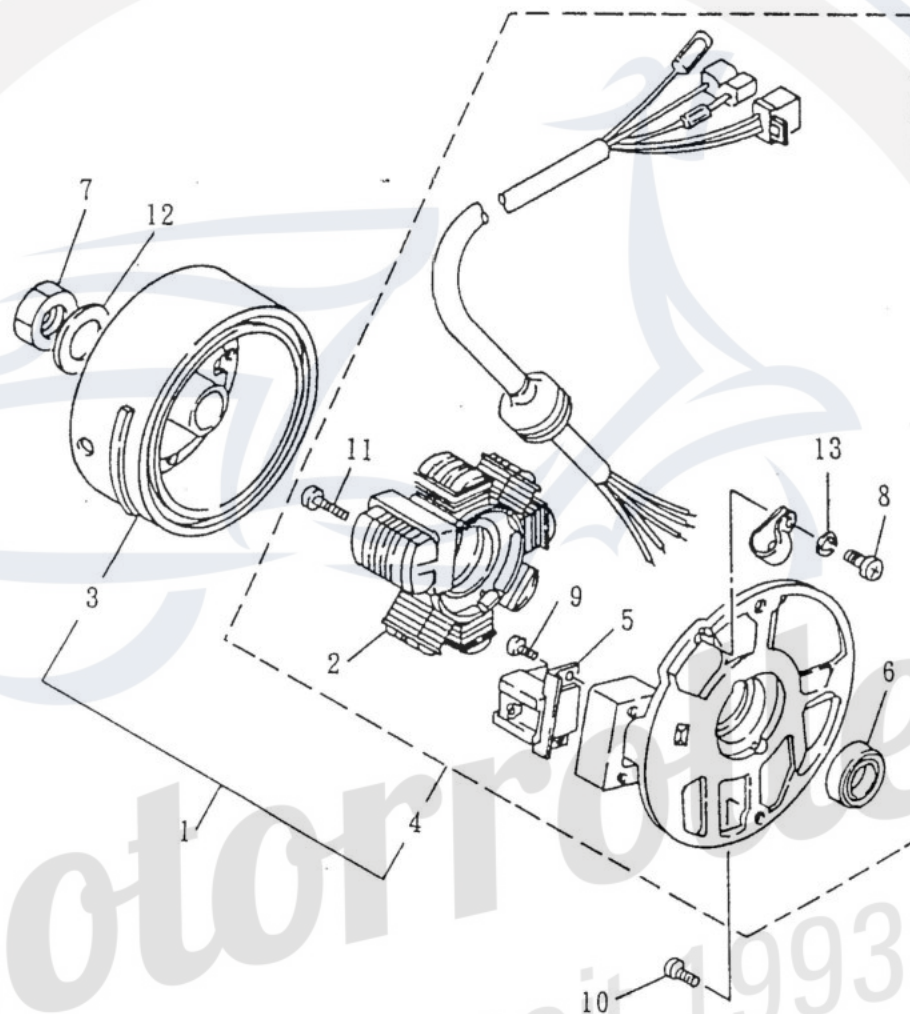

210. 12 0&呢11八丁011發電機

驗口八(四)脱

口八11丁8嫩1^

Q 'TY PRICE REMARK

1	35500-NAF-00	GENERATOR ASSEMBLY	發電機總成	1
2	35503-NAF-00	.STATOR COMP	電樞總成	1
3	35550-NAF-00	.ROTOR ASSEMBLY	轉子總成	1
4	35560-NAF-00	.BASE ASSEMBLY	發電機座總成	1
5	35580-NAF-00	.COIL ,pulser	脈動線圈	1
6	93110-19265	.OIL SEAL	油封	1
7	95201-101408-0	NUT,hexagon	六角螺帽	1
8	96310-04006-0	.SCREW ,pail head	十字孔頭螺絲	1
9	96310-06010-0	.SCREW ,pan head	十字孔頭螺絲	2
10	96310-06016-0	SCREW ,pan head	十字孔頭螺絲	2
11	96310-06025-0	.SCREW ,pan head	十字孔頭螺絲	2
12	97201-101726-0	WASHER,plate	平面墊圈	1
13	97301-040710-0	.WASHER , spring	彈簧墊圈	1

Motorroller.de
- seit 1993 -

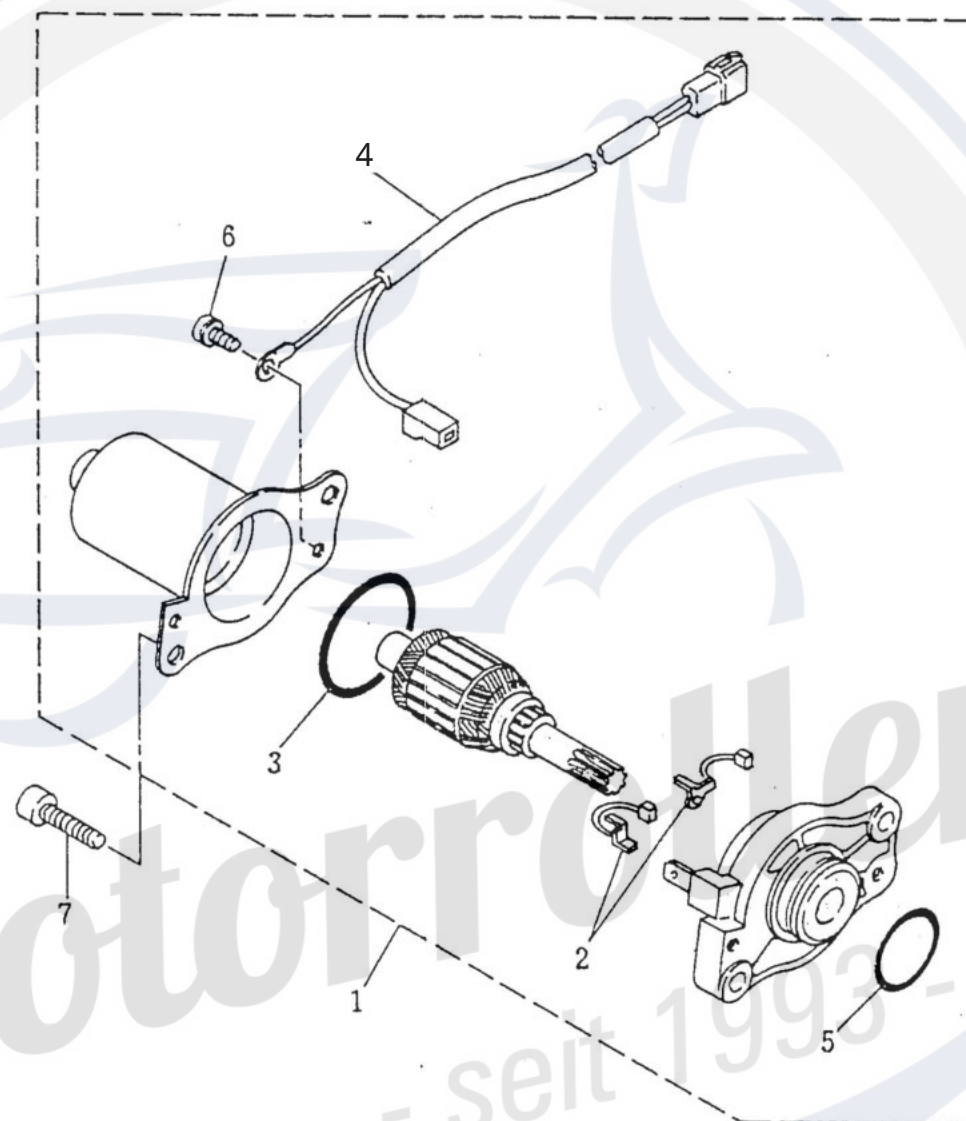


FIG. 13 STARTING MOTOR 起動馬達

月凡	PARTS NO.	PARTS NAME	Q'TY	PRICE	REMARK
1	35 ₈ 00^00	STARTING MOTOR ASSEMBLY	1		起動馬達
2	35 ₈ 01-11也00	.BRUSH SET	1		電刷組
3	35 ₈ 11^人人-00	.GASKET,yoke	1		墊片
4	35 ₈ 31^女-00	.CORD COMP	1		線圈總成
5	32 ₁ 0-19 230	.O-RING	1		護油圈
6	63 ₁ 2-040 ₁ 2-0	.SCREW ,pan head with washer	2		十字孔頭螺絲附墊圈
7	65 ₁ 0-06020^	BOLT, socket	2		六角承窩螺栓

Motorroller.de
- seit 1993 -


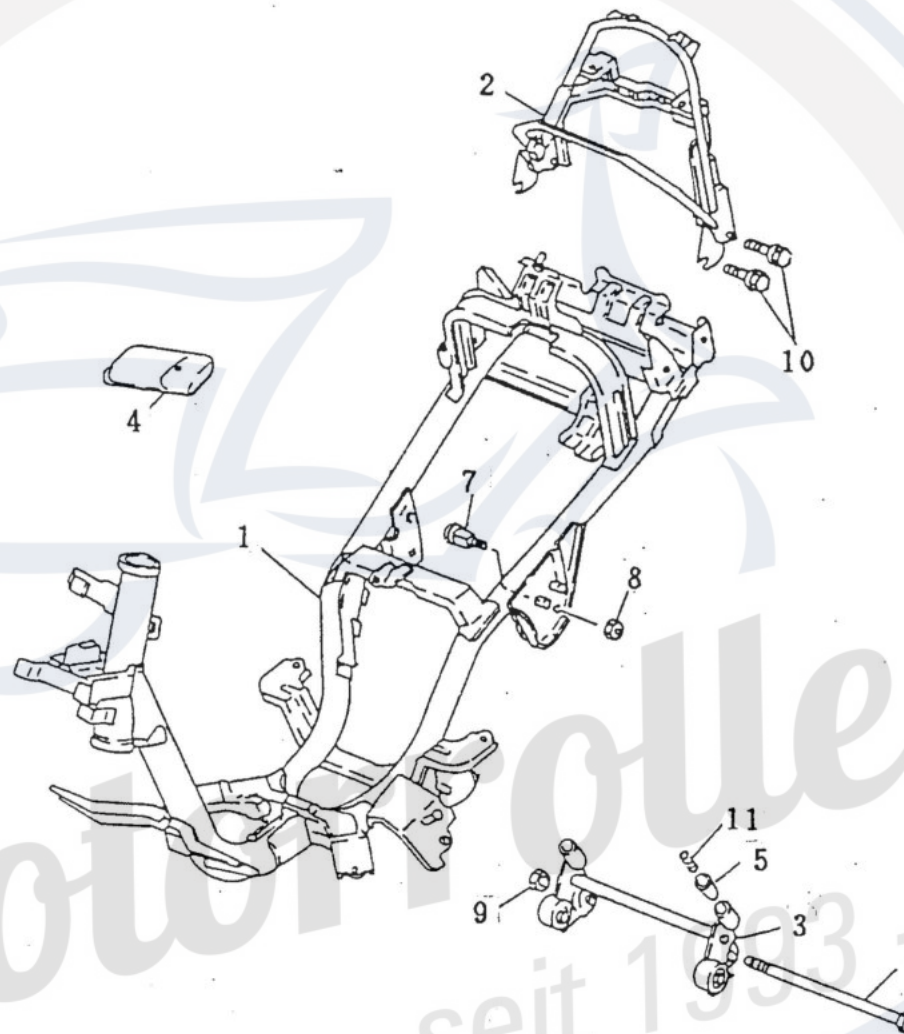


FIG. 14 FRAME 車架

脱	口八10^皿	PARTS NAME		Q'TY	PRICE	REMARK
1	41110-丫处-00	FRAME COMP	車架整體	1		
2	41232^处-00	REINFORCEMENT,tail	後支架	1		
3	41410^^00	ENGINE BRACKET COMP	弓1擎吊架整體	1		
4	56100^处-00	TOOL KIT	工具包	1		
5	93580-41836	DAMPER	吊架防震套	2		
6	94610-12250-0	BOLT,hexagon	吊架固定軸	1		
7	94710-10040-0	BOLT,engine mounting	引擎裝置四角螺栓	2		
8	95311-101710-0	NUT,nylon	尼龍螺帽	2		
9	95311-121912-0	NUT,nylon	尼龍螺帽	1		
10	96414-08012-0	BOLT,flange	凸緣螺栓	4		
11	97501-30114	SPRING,compression	吊架壓縮彈簧	2		

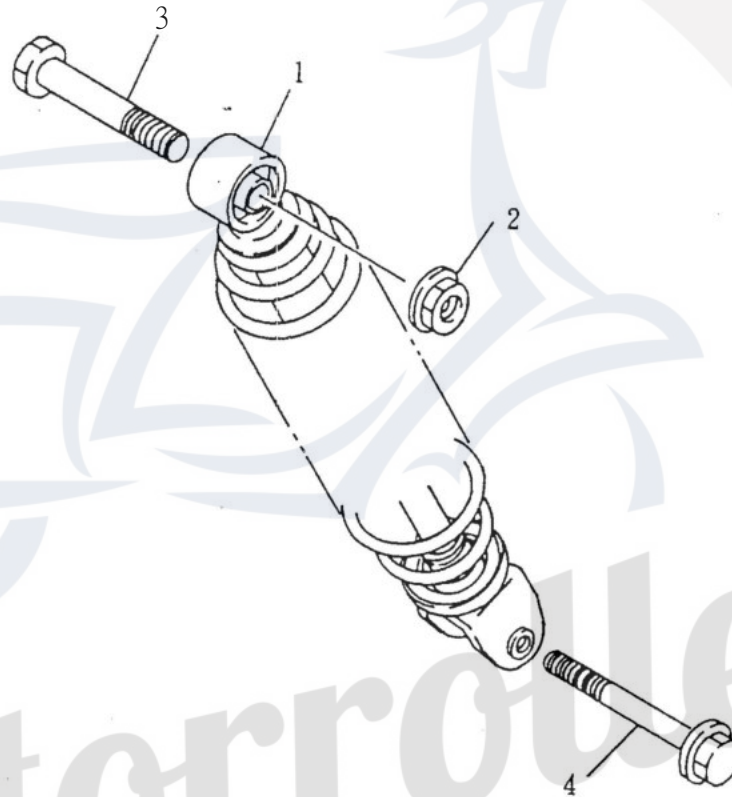


Z9

Aktuelle Preise erfahren sie auf www.motorroller.de

FIG. 15 REAR SUSPENSION 後懸吊系統


NO.	PARTS NO.	PARTS NAME	Q'TY	PRICE	REMARK
1	32210- 丫从-00 81100<	ABSORBER ASSEMBLY, rear	1		後緩衝器
2	95311-101710-C	NUT, nylon	1		尼龍螺帽
3	96210-10040-C	BOLT hexagon	1		六角螺栓
4	96414-08032-C	BOLT, flange	1		凸緣螺栓

Motorroller.de
- seit 1993 -

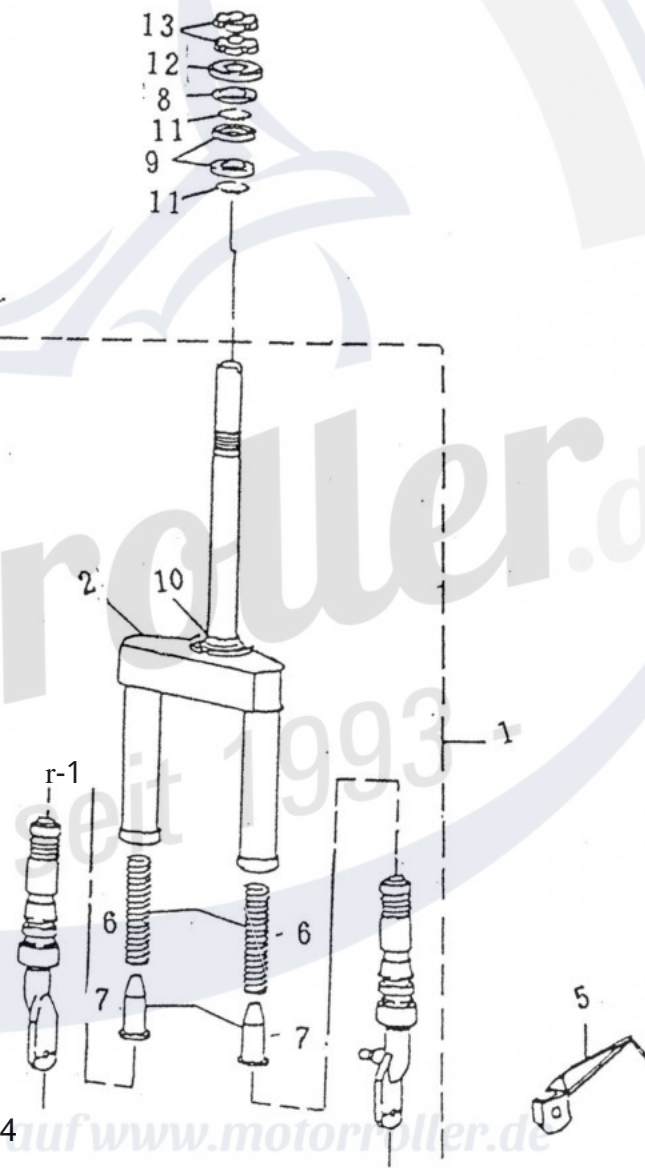

FIG, 16 FRONT FORK 前叉

祖	PARTS 肌	PARTS NAME		Q'TY	PRICE	REMARK
1	42100^~00	FRONT FORK ASSEMBLY	前叉總成	1		
2	42101-腳-00	.UNDER BRACKET COMP	下三角架	1		
3	42110-觀-00	.INNER TUBE COMP 1	前叉內管1	1		
4	42120-腳-00	.INNER TUBE COMP 2	前叉內管2	1		
5	42129-勝-00	HOLDER, cabie	鋼索座	1		
6	42141-服-00	.SPRING, front fork	前叉彈簧	2		
7	42195^~00	.RUBBER	橡皮墊	2		
8	46411小^~00	RACE, baU 1	珠碗1	1		
9	46412^~00	RACE ball 2	珠碗2	2		
10	4641傾八^00	.RACE, ball 4	珠碗4	1		
11	46415^~01	BALL	鋼珠巢	2		
12	46416^他00	COVER, ball race	珠碗蓋	1		
13	95601-254007-0	NUT ring	環形螺帽	2		

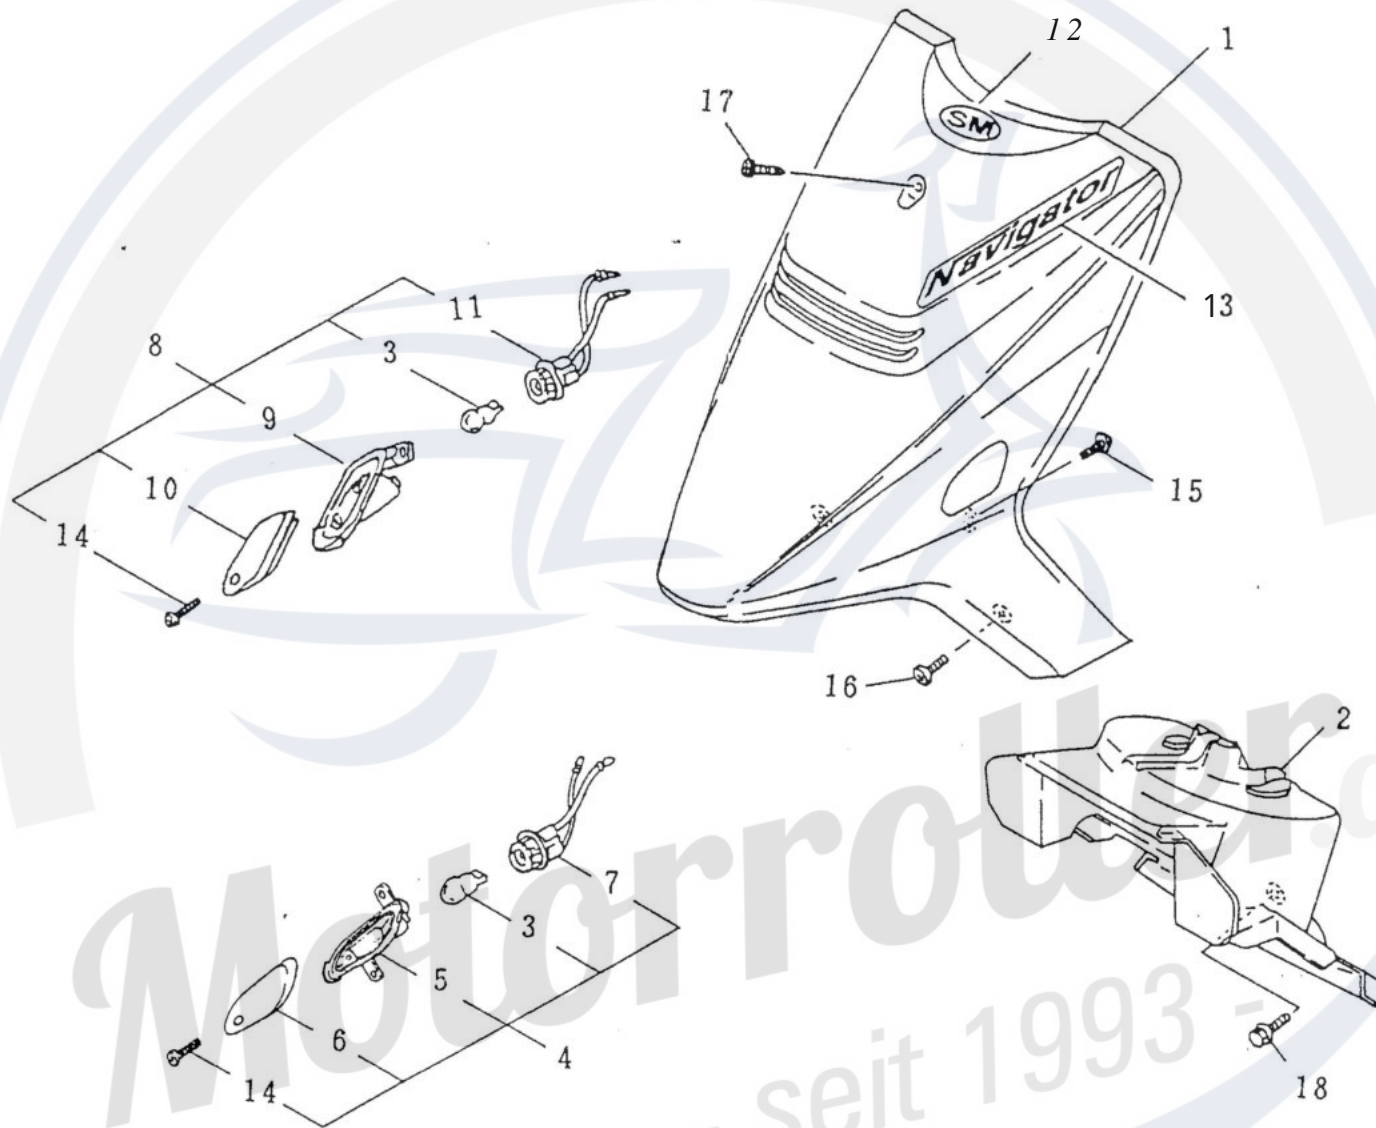

42,

FIG. 17 FENDER 擋風板

肌	PARTS 廠	PARTS NAME		Q'TY	PRICE	REMARK
1	51151小\处-00	FENDER,front	擋風板	1		
2	51552_好-00	FENDER,imier 1	下前擋泥蓋	1		
3	55311^他00	BULB,flasher(12V-10W)	方向燈泡	2		
4	55350-NAF-00	FLASHER,jfront L	前方向燈組左	1		
5	55351-NAF-00	FLASHER STAND front L	前方向燈座右	1		
6	55352-\处-00	FLASHER COVER,front L	前方向燈殼左	1		
7	55356-\处-00	BULB STAND,j&ont L	前方向燈泡座右	1		
8	5536(^处-00	FLASHER,jfront R	前方向燈殼右	1		
9	55361^^00	FLASHER STAND front R	前力向燈泡座上/	1		
10	55362-\从-00	FLASHER COVER^front R	標誌	1		
11	55366-NAF-00	BULB STAND,front R	標誌	1		
12	56578以他00	EMBLEM	自攻螺絲	2		
13	56781^处-00	EMBLEM	自攻螺絲	4		
14	96110-41616- 。	SCREW,tapping	自攻螺絲	2		
15	96112-51216^	SCREW,tapping	十字孔頭螺絲	1		
16	96112-51612^	SCREW, tapping	凸緣螺栓	2		
17	96316-06021	SCREW,pan head				
18	96414-06012-0	BOLT flange				

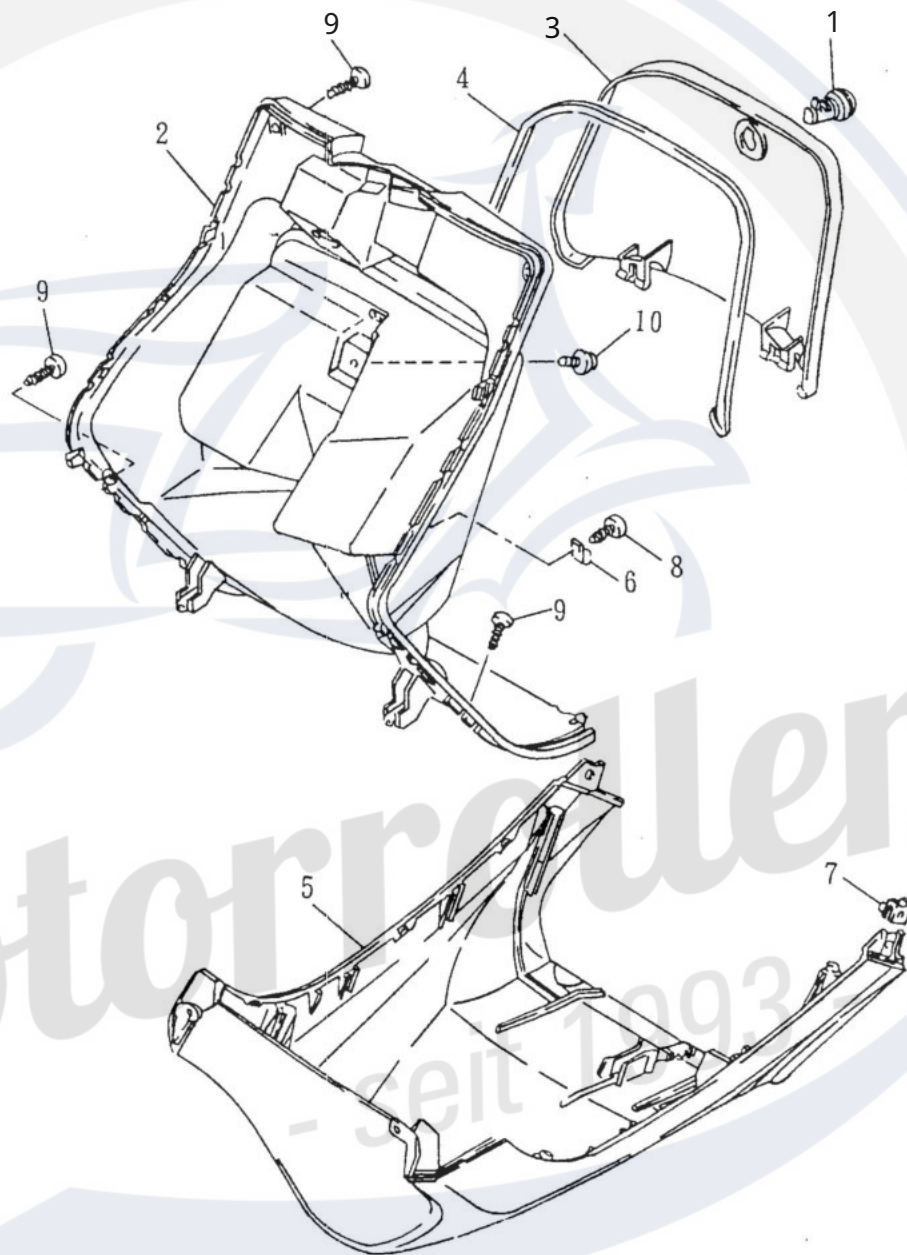


FIG. 18 INNER BOX 行李箱

NO.	PARTS NO.	PARTS NAME		Q	TY	PRICE	REMARK
1	53308-、从-00	.SIDE COVER LOCK ASSEMBLY	箱蓋鎖	1			
2	53311项八?-00	INNER BOX	行李箱	1			
3	53313抛尸-00	LID,inner box	行李箱蓋	1			
4	53371^^-00	DAMPER	行李箱防震墊	1			
5	53385-\\处-00	COVER,lower	下蓋	1			
6	53396^^处-00	HINGE	絞鏈	2			
7	95101-06010-0	NUT,spring	砸板螺帽	2			
8	96112-41218^	SCREW,tapping	自攻螺絲	2			
9	96112-51612^	SCREW,tapping	自攻螺絲	6			
10	96218-06016-0	BOLT,hexagon with washer	六角螺栓附墊圈	1			

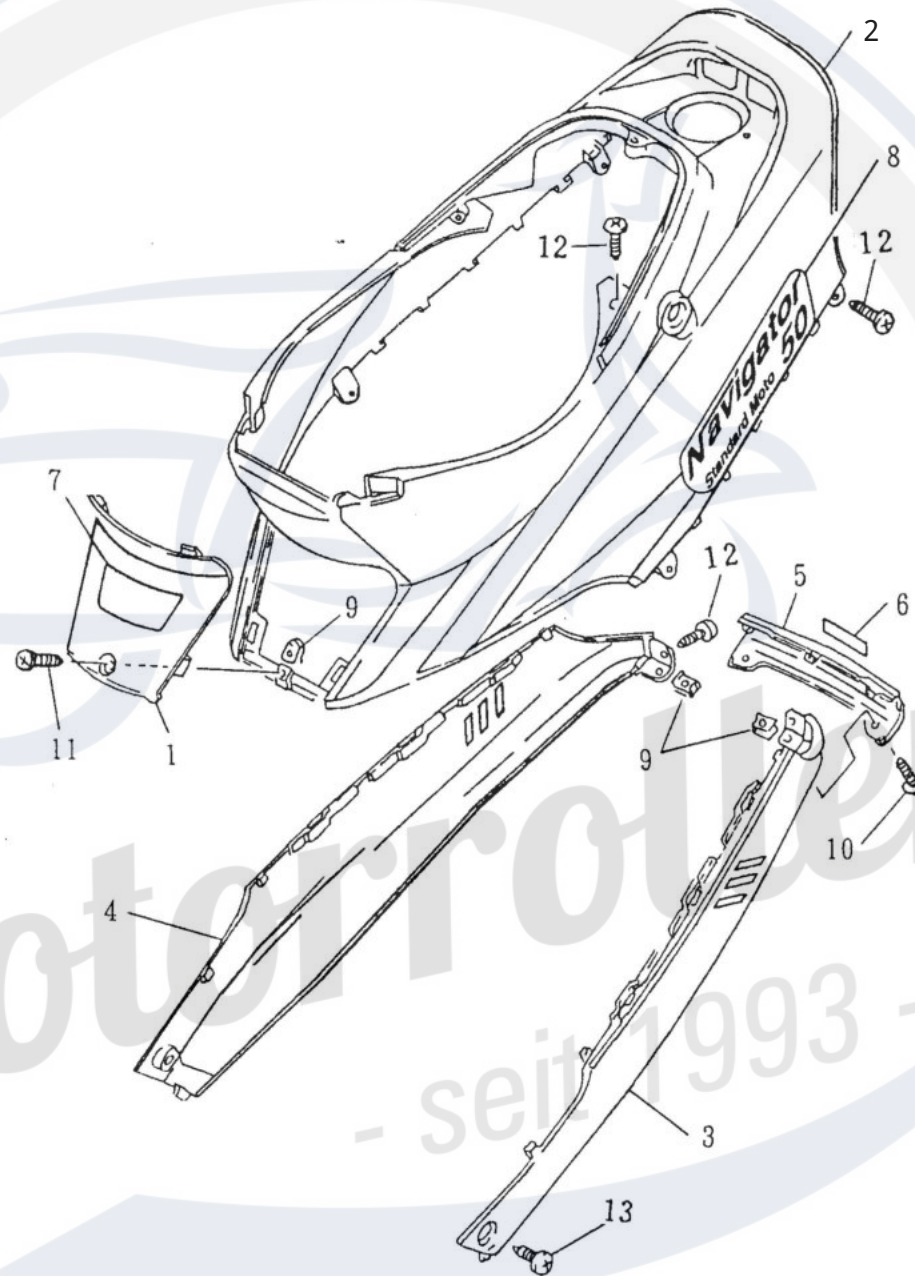


FIG. 19 SrDECOVER 側蓋

隱	PARTS 肌	PARTS NAME		Q'TY	PRICE	REMARK
1	51121^他00	MOLE, side cover F	側蓋護片前	1		
2	51171_他00	COVER, side	側蓋整體	1		
3	51712-、^00	MOLE, side cover L	側蓋護片左	1		
4	51722^处-00	MOLE, side cover R	側蓋護片右	1		
5	51732^^-00	MOLE,side cover B	側蓋護片後	1		
6	56328-、他00	EMBLEM	標誌	1		
7	56576-NAF-00	EMBLEM	標誌	1		
8	56783-NAF-00	EMBLEM	標誌	2		
9	95101-05012	NUT,spring	U型板螺帽	3		
10	96104-51216^	SCREW,socket tapping	自攻螺絲	2		
11	96106-51216^	SCREW,tapping	自攻螺絲	1		
12	96112-51612^	SCREW,tapping	自攻螺絲	9		
13	96316-06018^	SCREW,pan head	十字孔頭螺絲	2		


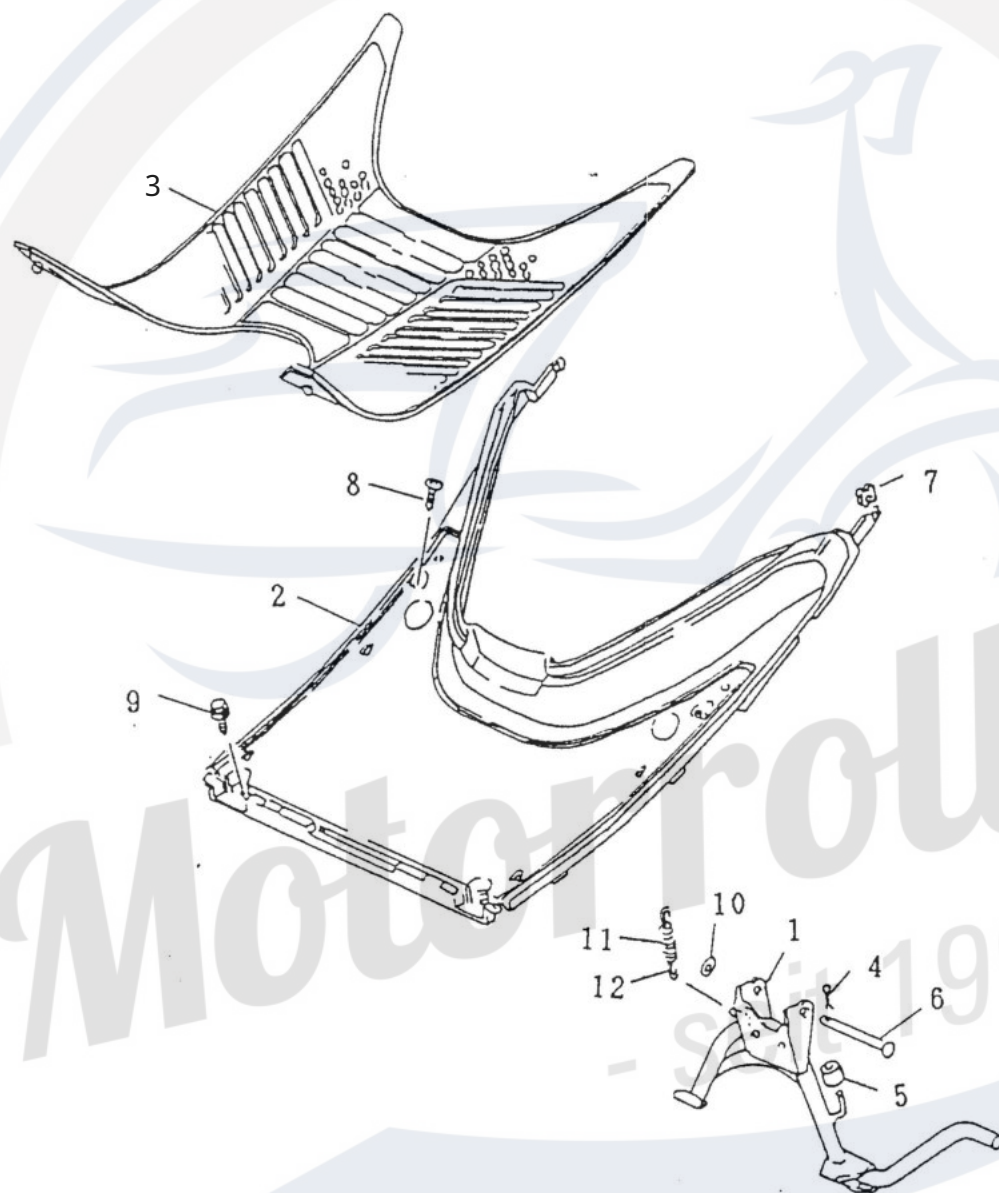


FIG. 20 STAND.FOOTREST 支架.腳踏板

NO.	PARTS NO.	PARTS NAME		QTY	PRICE	REMARK
1	33211-丫勝00	STAND,main	主 腳 架	1		
2	53481-\\处-00	BOARD footrest	腳 踏 板	1		
3	53483-NAF-00	MAT	踏 板 墊	1		
4	90230-12010	COTTER PIN	開 尾 銷	1		
5	93580-62614	.SNUBBER	主腳架緩衝橡皮塊	1		
6	94610-10078^	FK SHAFT	主腳架固定軸	1		
7	95101-05012	NUT,spring	I ; 型板螺帽	2		
8	96112-51612^	SCREW,tapping	自 攻 螺 絲	2		
9	96218-06020-0	BOLT,hexagon with washer	六 灼 螺 栓 附 墊 圈	4		
10	97201-102020-0	WASHER,plate	平 面 墊 圈	1		
11	97506-12082	SPRING tension 2	主腳架拉伸彈簧 2	1		
12	97506-32131	SPRING,tension	主腳架拉伸彈簧 1			

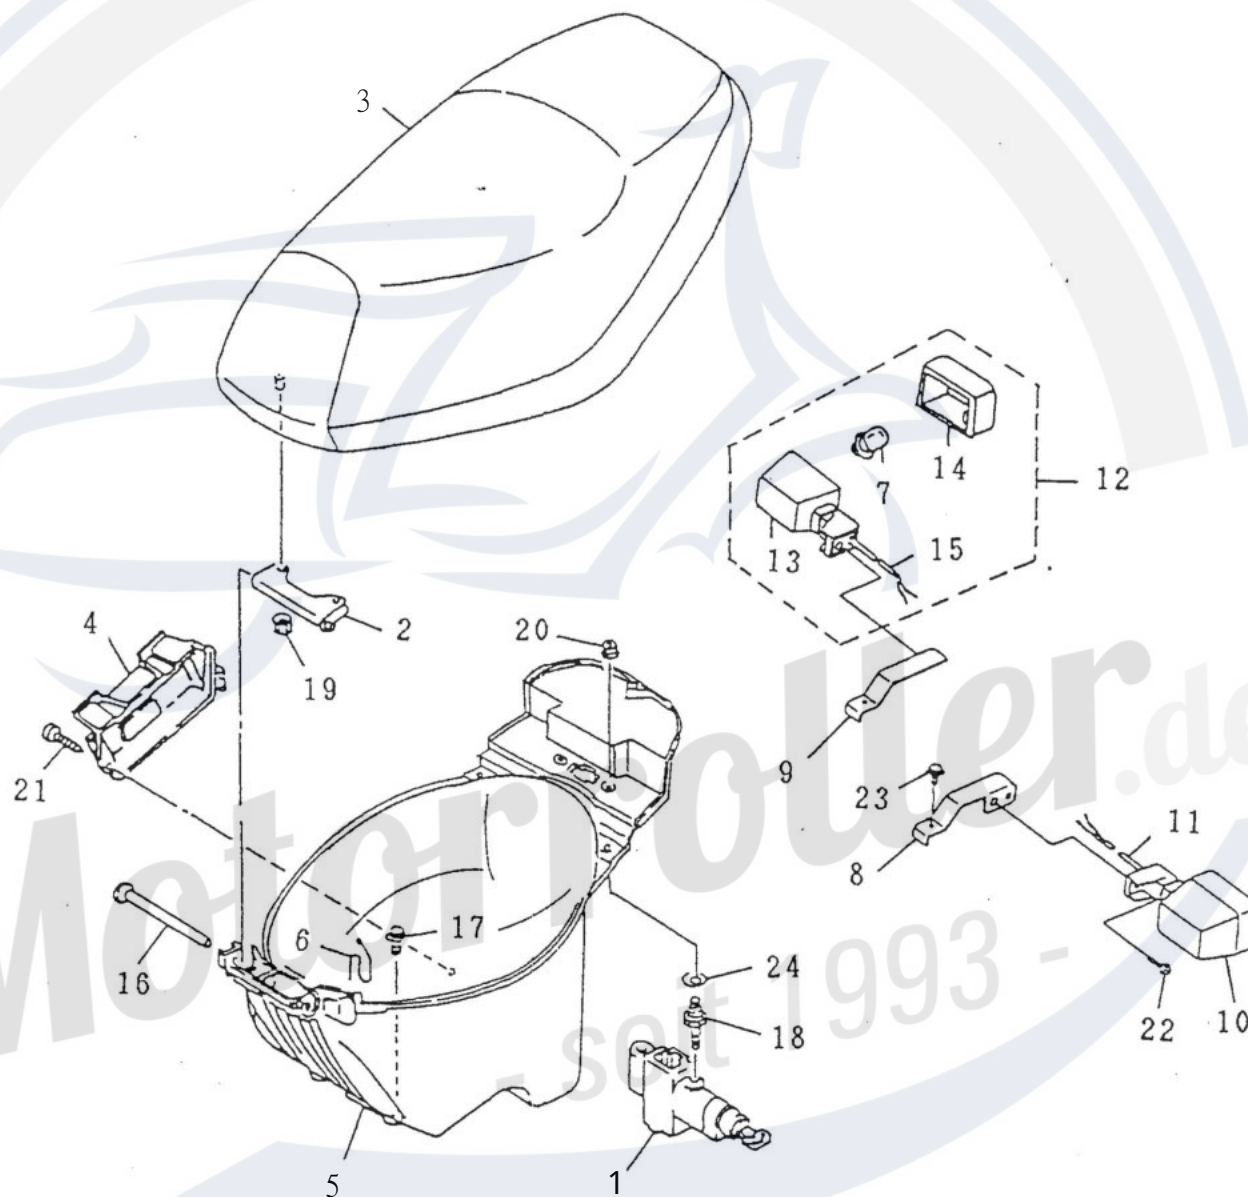

戸1& 21 8£八1'座墊

脱	口能丁8肌	PARTS NAME		Q'TY	PRICE	REMARK
1	52705-\处-00	.SEAT LOCK ASSEMBLY	座墊鎖總成	1		
2	52726-NAF-00	HINGE, seat	座墊活葉	1		
3	52730-丫处-00	DOUBLE SEAT ASSEMBLY	雙人座墊總成	1		
4	52829-\八口-00	COVER^battery	蓄電池蓋	1		
5	52830-NAF■.00	BOX	置物箱	1		
6	52898-NAF-00	HANGER, helxnet	安全帽吊架	1		
7	55711-1^00	BULB flasher (12V-10W)	方向燈泡	2		
8	55736-1^00	BRACKET rear flasher L	方向燈固定座左	1		
9	55746-J^00	BRACKET, rear flasher R	方向燈固定座右	1		
10	55750-1^00	FLASHER^rear L	後方向燈組左	1		
11	55756-1^00	BULB STAND, rear L	後方向燈泡座左	1		
12	55760_?^00	FLASHER, rear R	後方向燈組右	1		
13	55761-1^00	FLASHER STAND, rear L	後方向燈座	2		
14	55762-NCF-00	FLASHER COVER, rear	後方向燈殼	2		
15	55766-1^00	BULB STAND, rear R	後方向燈泡座右	1		
16	94610-10115^	PIN	座墊活葉銷	1		
17	94710-06016-匚	BOLT, flange	置物箱固定螺栓	2		
18	94710-06051^	BOLT, seat fitting	座墊鎖固定螺栓	2		
19	95401-061006-0	NUT, flaiige	凸緣螺帽	2		
20	95401-061007-0	NUT, flange	凸緣螺帽	2		
21	96106-51216^	SCREW, tapping	自攻螺絲	1		

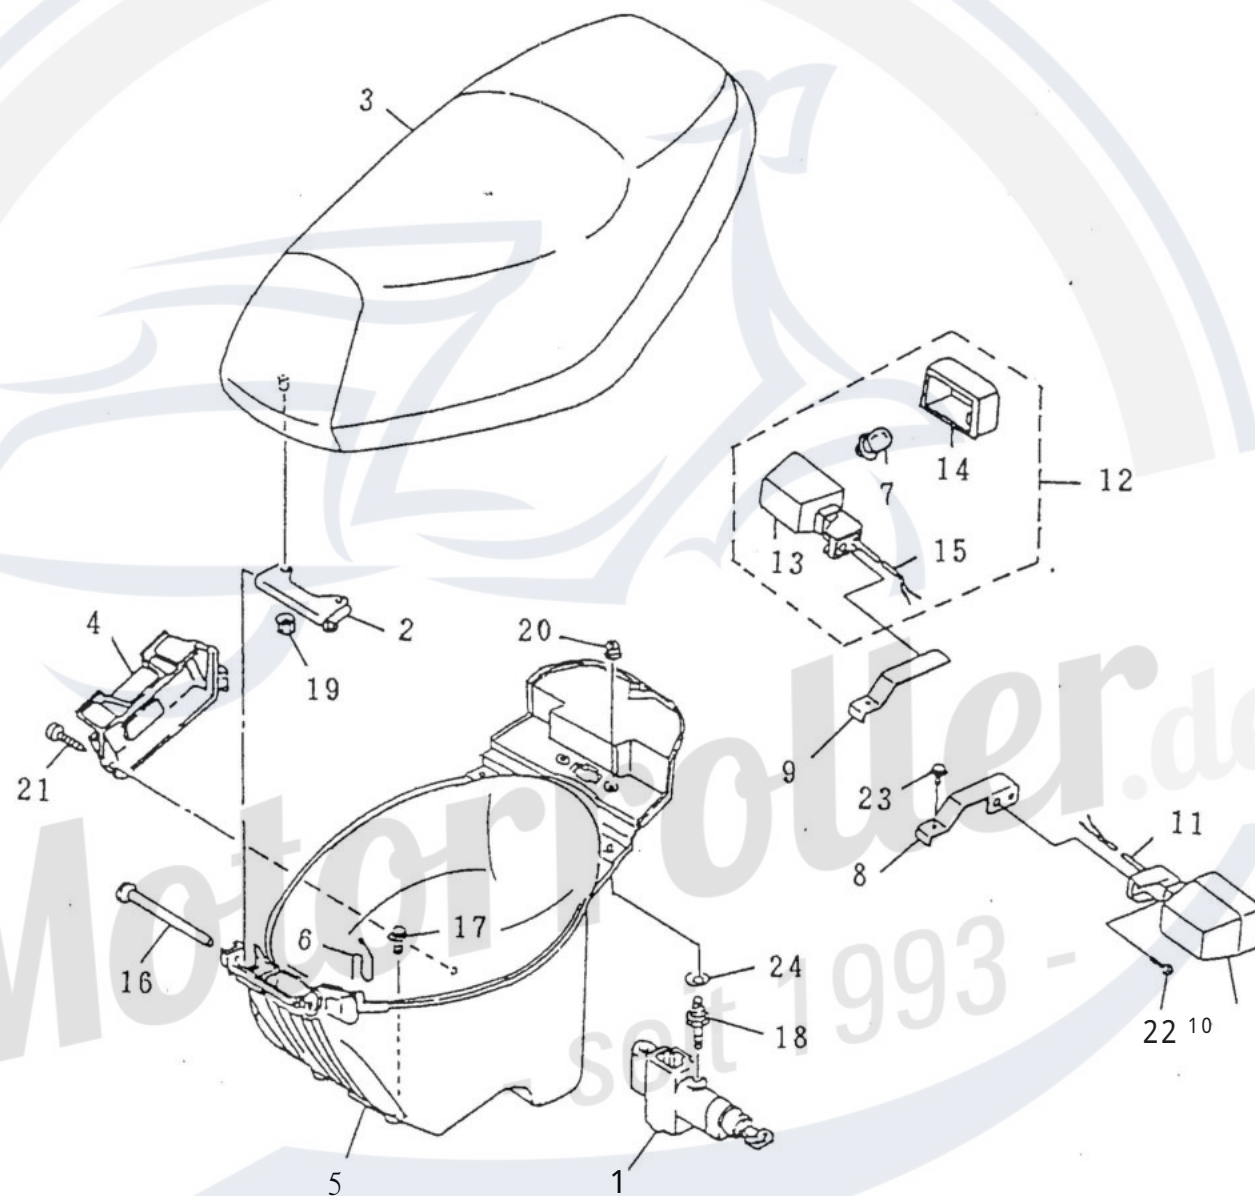


FIG. 21 5[八丁座贊

NO.	PARTS NO.	PARTS NAME		QTY	PRICE	REMARK
22	96310-06016-0	801£¥ , □ 3111^3(1	十字孔頭螺絲	2		
23	96414-06012-0	BOLT,flange	凸緣螺栓	2		
24	97201-082420-0	WASHER,plate	平面墊圈	2		

Motorroller.de
- seit 1993 -


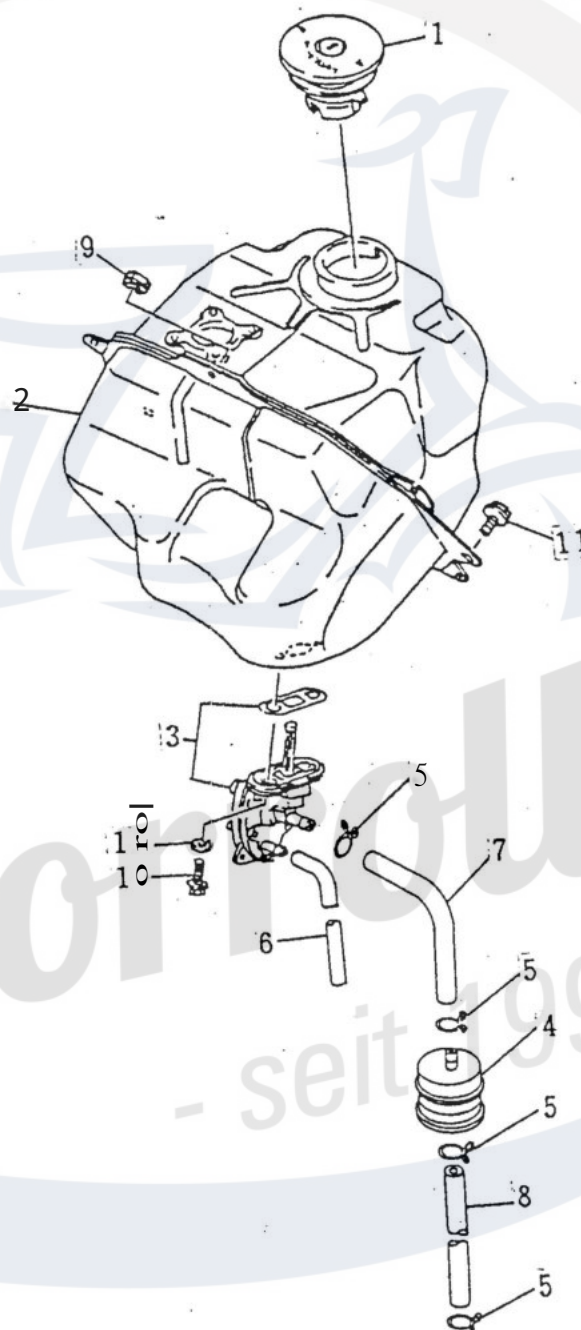


FIG. 22 FUEL TANK 油箱

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	43102^1^00	.CAP ASSEMBLY	汽油箱蓋總成	1		
2	43110^处-00	FUEL TANK COMP	汽油箱總成	1		
3	43500-\处-00	CUP,fuel	油杯	1		
4	43570-NAF-00	FUEL,filter	汽油過濾杯	1		
5	90210-12010	CLIP	管夾	4		
6	90310-42070	HOSE	耐油管	1		
7	90310-50101	PIPE,fuel	汽油管	1		
8	90310-50102	PIPE,fuel	汽油管	1		
9	95401-061006-0	NUT,flange	凸緣螺帽	1		
10	9.6318-06020-0	SCREW,pan head	十字孔頭螺絲	2		
11	96414-06010-0	BOLT, flange	凸緣螺栓	2		
12	97210-061315	WASHER^plate	石棉墊圈	2		

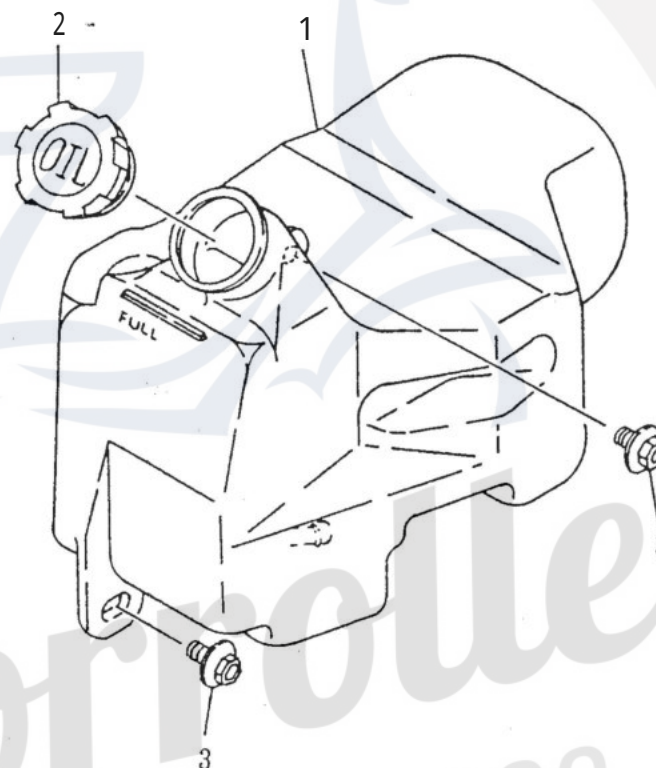

?10. 23 0山丁八1^!<：潤滑汕箱

NO.	PARTS NO.	PARTS NAME	Q 'TY	PRICE	REMARK
1	43751_从-00	TANK,oU	1		潤滑油箱
2	43771-\处-00	BODY,cap	1		潤滑油箱蓋
3	96218-06016-0	BOLT,hexagon with washer	2		六角螺栓附墊圈

Motorroller.de
- seit 1993 -

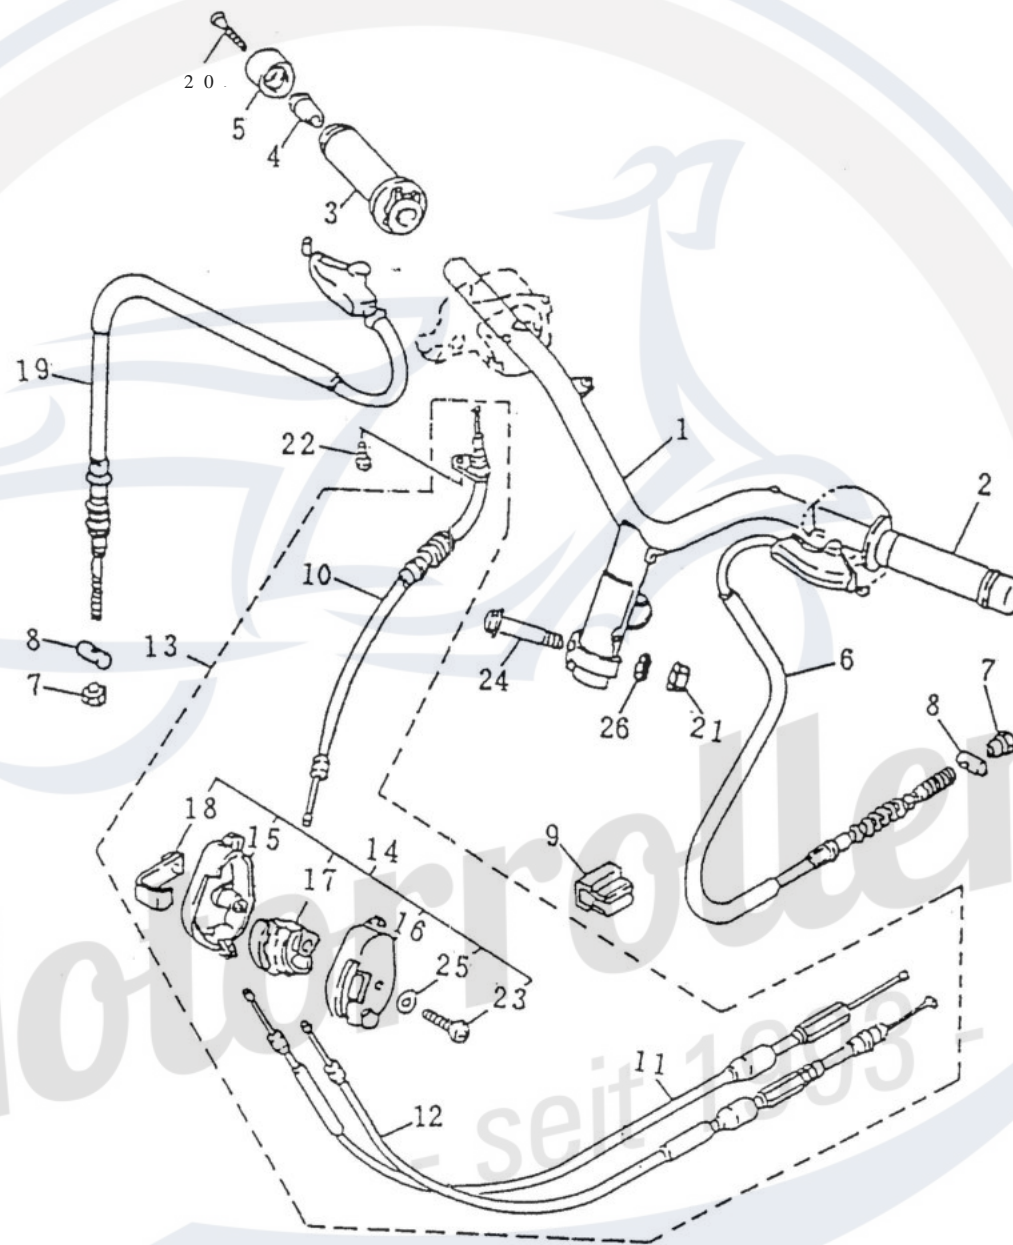


FIG. 24 STEERING HANDLE.CABLE 轉向把手.鋼索

NO.	PARTS NO.	PARTS NAME		QTY	PRICE	REMARK
1	4 6110-做?-00	HANDLE COMP	把手整體	1		
2	4 6240^1^00	GRIP L	左握把	1		
3	4 6241.1^00	GRIP ASSEMBLY R	右握把總成	1		
4	61320-丫八只-00	CABLE,brake	後剎車鋼索	1		
5	61379-\\处-00	NUT,adjust	調整螺帽	2		
6	61389-\\处-00	PIN,fixture	導線固定塊	2		
7	61393-从口-00	HOLDER	鋼索固定座	1		
8	61611^处-00	.CABLE,throttle F	節流鋼索前	1		
9	61612-NAF-00	.CABLE,throttle	化油器鋼索	1		
10	61613-\\处-00	.CABLE,pump	油泵鋼索	1		
11	61620^处_00	CABLE ASSEMBLY	節流鋼索總成	1		
12	61660-歡[-00	.CABLE,pan connector	鋼索接筒	1		
13	61661«^处-00	.STAND,connector	接筒座	1		
14	61662小^处-00	.CAP,connector	接筒蓋	1		
15	61663«[^00	.SLIDER,comiecto	接筒滑塊	1		
16	61668^处-00	FIXTURE,connector	接筒固定片	1		
17	61820-脚-00	CABLE,brake	前剎車鋼索	1		
18	9 5311-10 1710-0	NUT,nylon	尼龍螺帽	1		
19	9 6310-0 50 10^	SCREW,pan head	十字孔頭螺絲	1		
20	9 6310-0 50 30-0	SCREW,pan head	十字孔頭螺絲	1		
21	9 6414-10 047-0	BOLT,flange	凸緣螺栓	1		

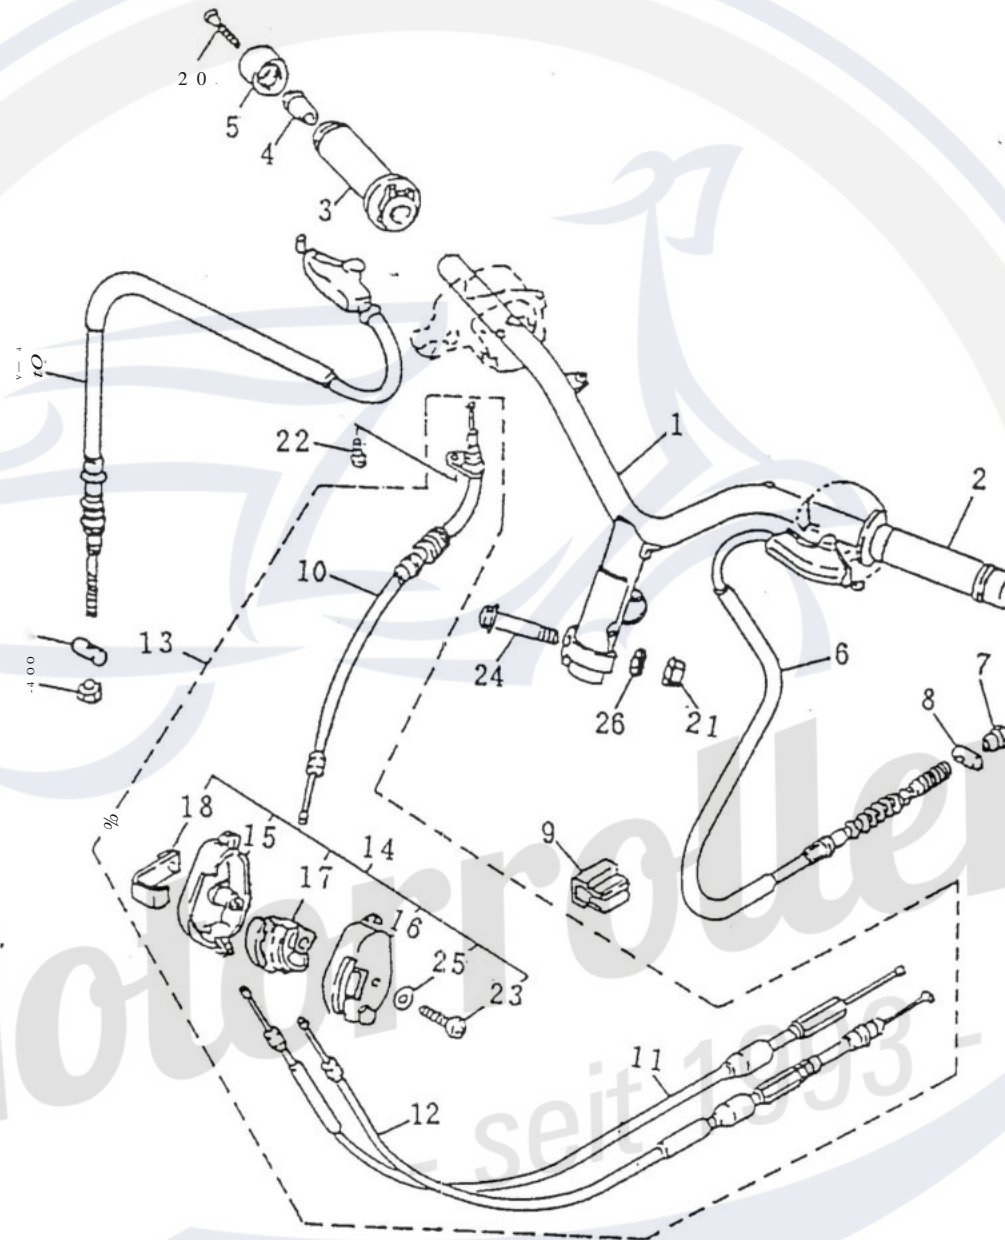


FIG. 24 STEERING HANDLE.CABLE 轉向把手.鋼索

肌	PARTS	肌	PARTS NAME		Q'TY	PRICE	REMARK
22	97201-051208-0		WASHER,plate	平面墊圈	1		
23	97201-102020-0		WASHER^plate	平面墊圈	1		

Motorroller.de
- seit 1993 -


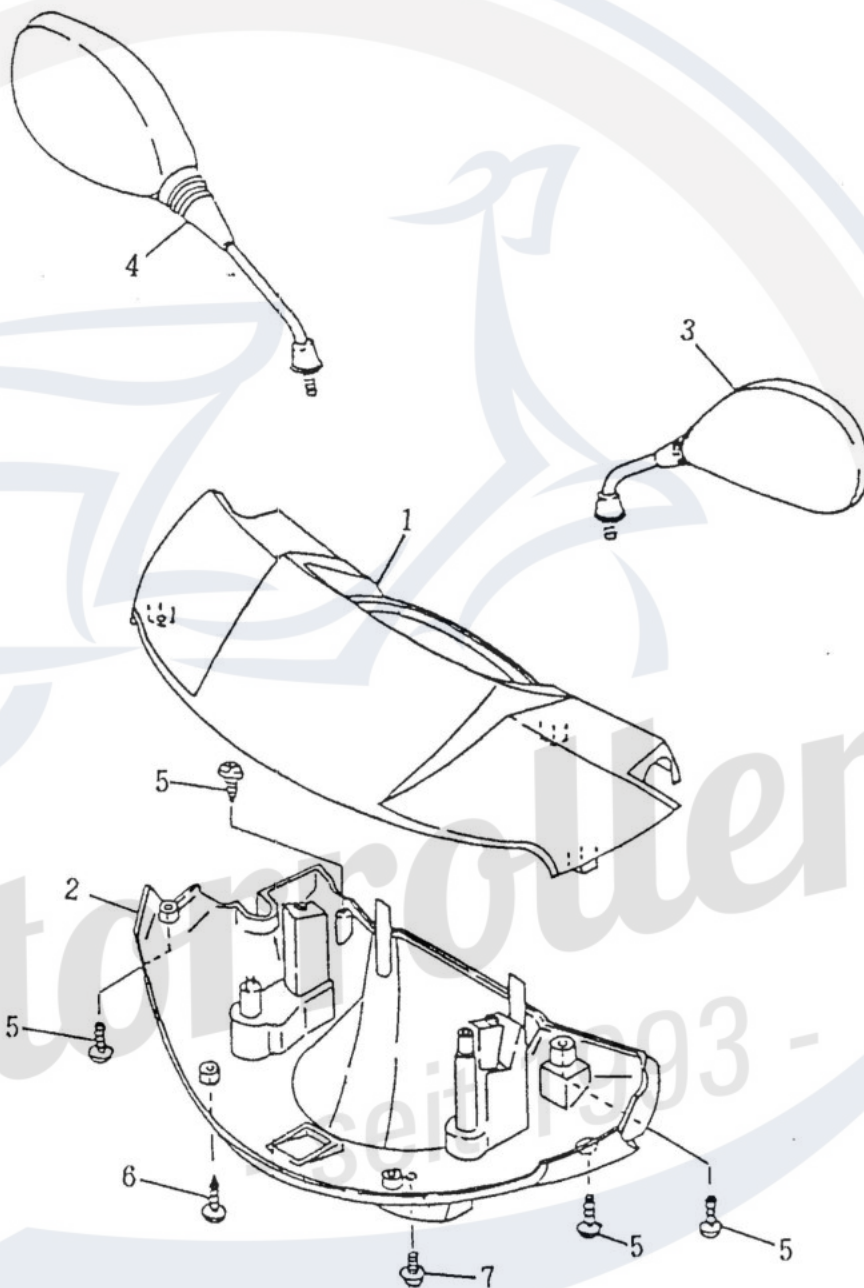


FIG. 25 COWLING 整流罩

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	552 13-NFF-00	COVER,upper	把手上蓋	1		
2	552 15-NAF-00	COVER,lower	把手下蓋	1		
3	562 80-NAF-00	REAR VIEW MIRROR ASSEMBLY L	左後視鏡總成	1		
4	562 90-NAF-00	REAR VIEW MIRROR ASSEMBLY R	右後視鏡總成	1		
5	9 6112-51612-C	SCREW ,tapping	自攻螺絲	4		
6	9 6112-52 116-C	SCREW tapping	自攻螺絲	2		
7	9 62 18-0 50 12-C	BOLT,hexagon with washer	六角螺栓附墊圈	1		

Motorroller.de
- seit 1993 -

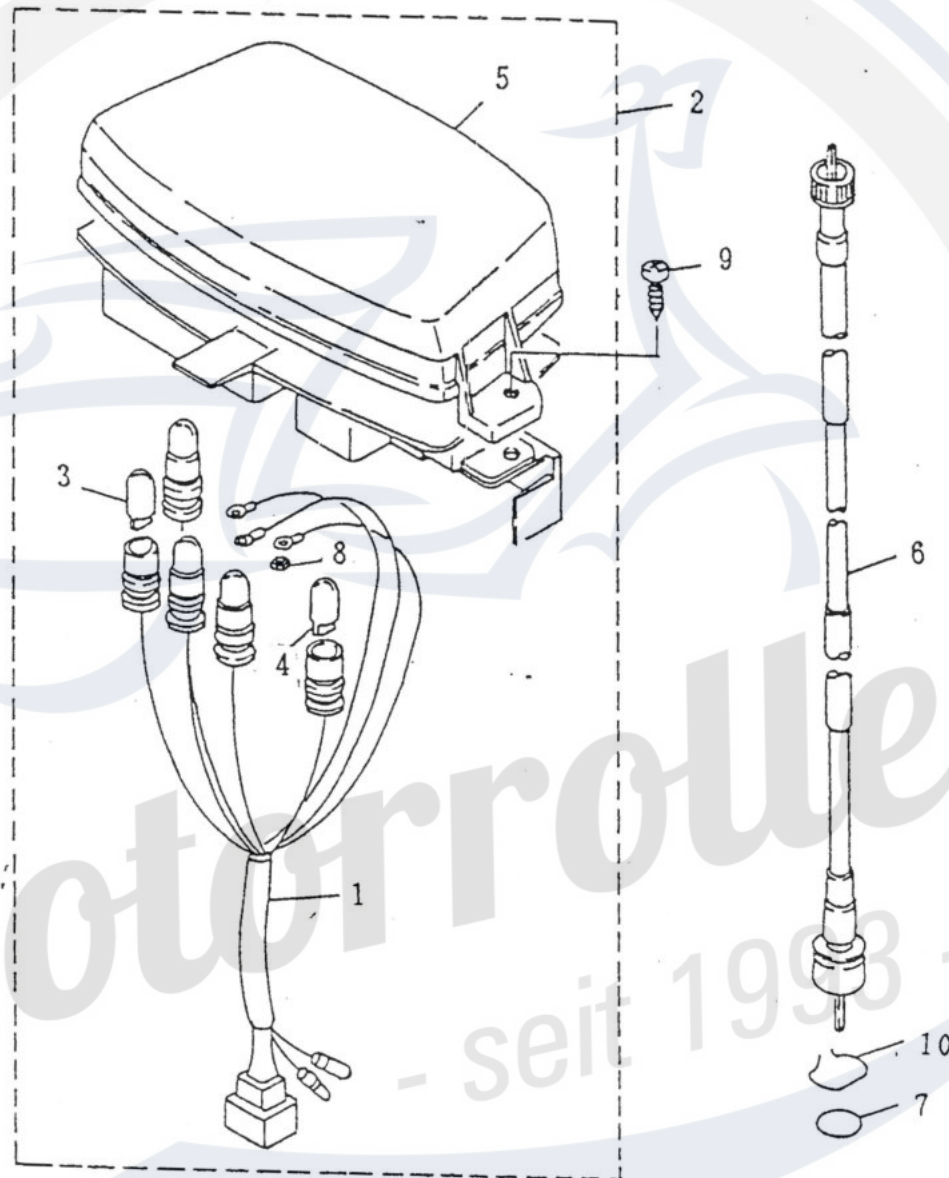


G5

FIG. 26 SPEEDOMETER 速度表

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	55509^ 处_00	.SOCKET CORD ASSEMBLY	燈座總成	1		
2	55510 掀口-00	SPEEDOMETER ASSEMBLY	速度表總成	1		
3	55517^ 他00	.BULB (12V-1.7W)	燈泡	4		
4	55518^ 处-00	.BULB (12V-3.4W)	燈泡	1		
5	55530^^-00	.GLASS PLATE	速度表蓋	1		
6	61520- 丽-00	SPEEDOMETER CABLE ASSEMBLY	速度表鋼索總成	1		
7	93210-24140	O-RING	護油圈	1		
8	95201-030603-0	.NUT,hexagon	六角螺帽	3		
9	96112-51612-0	SCREW ,tapping	自攻螺絲	2		
10	97050-12019	RING 7STOP	速度錶導線止動環	1		

Motorroller.de
- seit 1993 -

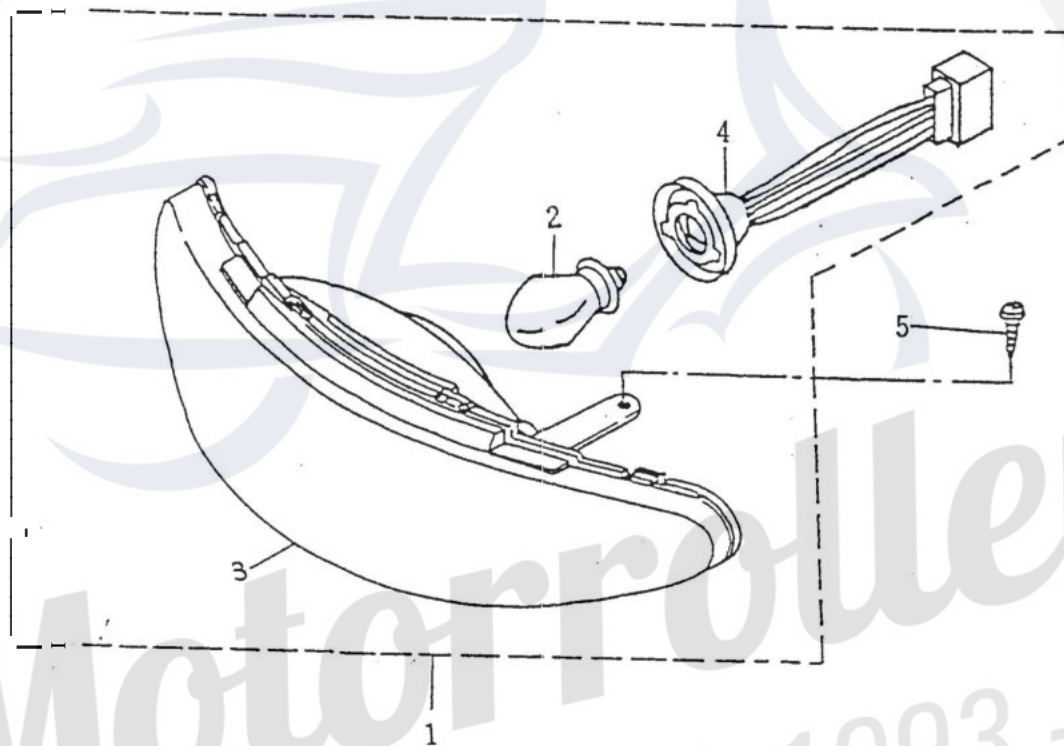

- seit 1993 -


SP

Aktuelle Preise erfahren sie auf www.motorroller.de

FIG. 27 HEADLIGHT 前燈

NO.	PARTS NO.	PARTS NAME		Q'TY	PRICE	REMARK
1	55300- V △-00	HEADLIGHT ASSEMBLY	前燈總成	1		
2	55314 小八 ?-00	.BULB,headdUght (12V-20/20W)	前燈燈泡	2		
3	5532(^-00	.LENS ASSEMBLY	前燈單元總成	1		
4	55340- V △-00	• SOCKET CORD ASSEMBLY	燈座總成	1		
5	96112-51612-0	SCREW ,tapping	自攻螺絲	1		

Motorroller.de
- seit 1993 -

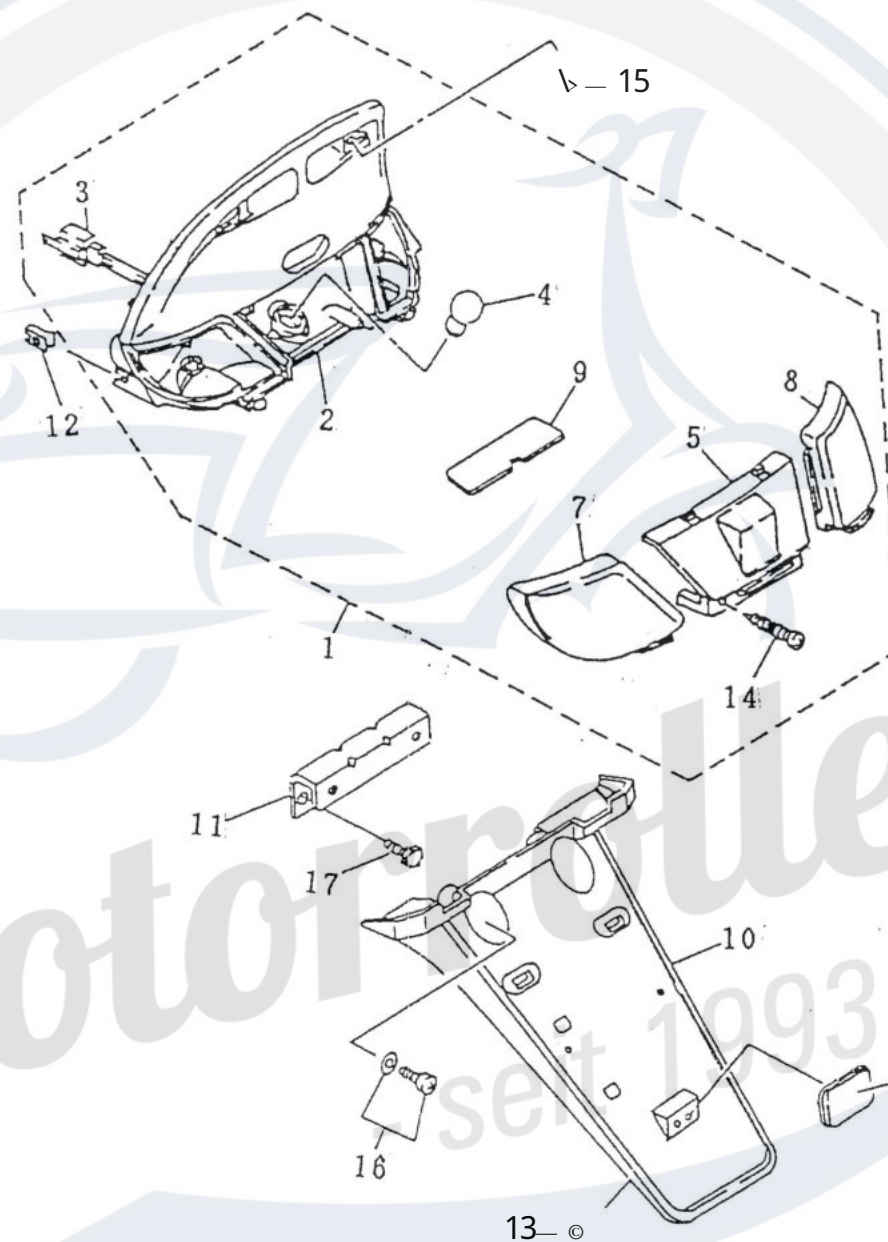

Motorroller.de

FIG. 28 TAILLIGHT 後燈

船	PARTS > 10.	PARTS NAME		Q`TY	PRICE	REMARK
1	55700->^ -00	TAILLIGHT ASSEMBLY	後燈總成	1		
2	55701->«^02	STAND, taiU ight	後燈座	1		
3	55713^^00	BULB STAND, taiU ight	後剎車燈泡座	1		
4	55714 小八 1^00	BULB (12V - 18/5W)	燈泡	1		
5	55721-NAF-00	LENS, taiiight	後燈罩	1		
6	55722-1^ -00	REFLECTOR	反射片	1		
7	55732-1^ -00	LENS flaslierL	後方向燈罩左	1		
8	55742 擺 冂 -00	LENS flasher R	後方向燈罩右	1		
9	55743-NAF-00	LENS, licence light	牌照燈罩	1		
10	55751^ ^01	BRACKET, Ucense	牌照板	1		
11	55756-NAF-01	HOLDER	牌照板固定座	1		
12	95101-05012	NUT, spring	II型板螺帽	2		
13	95201-050804-0	NUT, hexagon	六角螺帽	1		
14	96110-41616-0	SCREW, tapping	自攻螺絲	2		
15	96112-51216^	SCREW, tapping	自攻螺絲	2		
16	96312-06020-0	SCREW, pan head with washer	十字孔頭螺絲附墊圈	2		
17	96414-06012-0	BOLT, flange	凸緣螺栓	2		

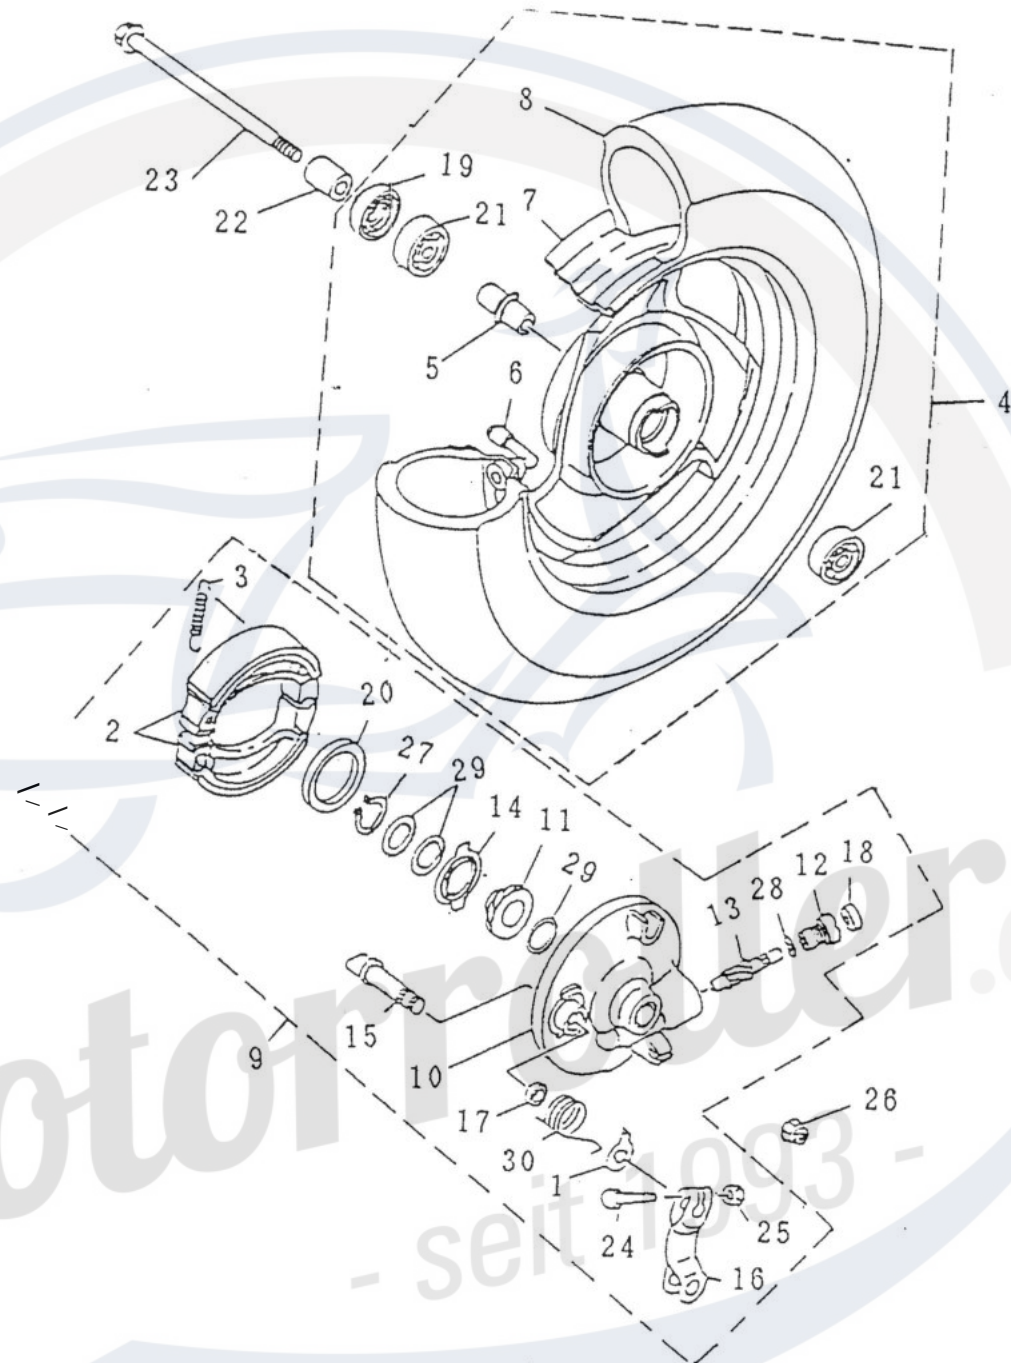


FIG 29 FRONT WHEEL 前輪

祖	口从丁呂說	PARTS NAME		Q'TY	PRICE	REMARK
1	32331- 丫屢00	.PLATE indicator	指示器平板	1		
2	32345^ ^-00	.BRAKE SHOE KIT	後剎車塊組	1		
3	32346-NAF-00	.SPRING,tension	拉伸彈簧	2		
4	42500-腳-00	FRONT WHEEL ASSEMBLY	前輪總成	1		
5	42515-蕭-00	FLANGE spacer	凸緣隔筒	1		
6	42570*^ ^-00	VALVE, rim	氣門嘴	1		
7	42580-冊-00	FRONT WHEEL COMP	前輪圈	1		
8	42590^ ^-00	TIRE (90/90-10)	外胎	1		
9	45801_腳-00	BRAKE SHOE ASSEMBLY	前剎車嵌板總成	1		
10	45821^ ^-00	„PLATE,brake shoe	前剎車盤	1		
11	45835^ ^-00	.GEAR,drive (23T)	驅動齒輪	1		
12	45836- :^ _00	.BUSH	襯套	1		
13	45838-曆-00	.GEAR,meter (12T)	速度表齒輪	1		
14	45849-1^ -00	.CLUTCH, meter	速度表離合器	1		
15	45851-> ^-00	.CAM SHAFT	凸輪軸	1		
16	45855-见^ 00	.LEVER ^cam shaft	剎車搖臂	1		
17	45859-> ^-00	.SEAL,cam shaft	凸輪軸密封圈	1		
18	93110-07144	.OIL SEAL	油封	1		
19	93110-20357	OIL SEAL	油封	1		
20	93110-40525	.OIL SEAL	油封	1		
21	93320-1035112	BEARING,radial baU	滾珠軸承	2		

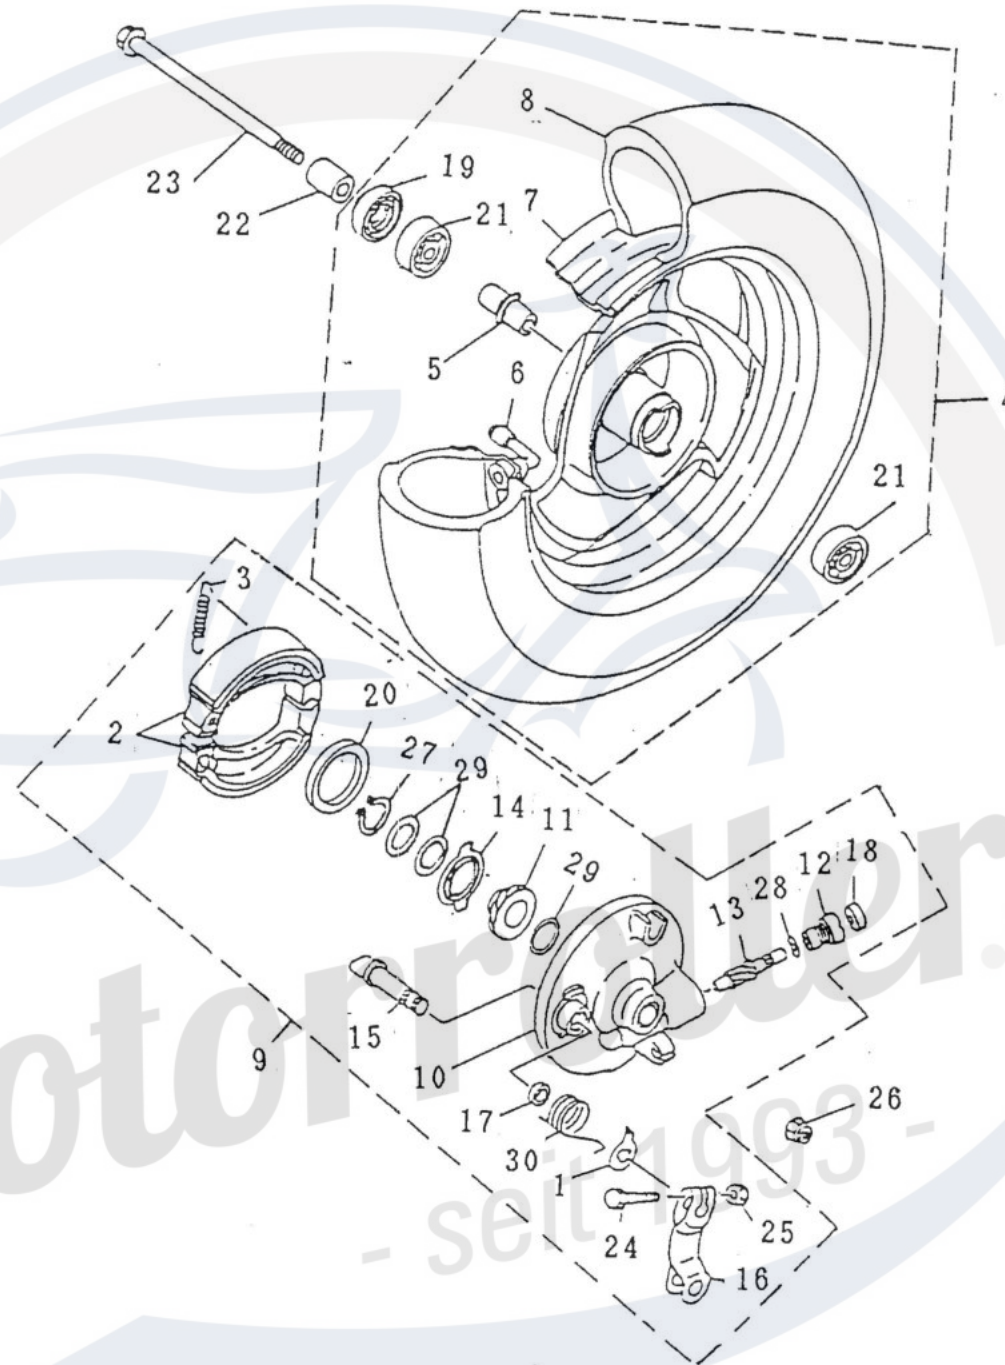


FIG. 29 FRONT WHEEL 前輪

肌	PARTS 船	PARTS NAME		Q'TY	PRICE REMARK
22	9 3510-102025	COLLAR	前輪間隔管	1	
23	94 610-10155-6	AXLE,wheel	前輪軸	1	
24	94 716-06030^	.BOLT,hexagon	六角螺栓	1	
25	9 5311-061006-6	.NUT,nylon	尼龍螺帽	1	
26	9 5311-101710 』	NUT,nylon	尼龍螺帽	1	
27	9 7010-20012	.CIRCLIP	(：形扣環	1	
28	9 7201-071008-8	.WASHER,plate	平面墊圈	1	
29	9 7201-202607-6	.WASHER,plate	平面墊圈	3	
30	9 7508-26255	.SPRING,torsion	扭轉彈簧	1	

Motorroller.de
- seit 1993 -

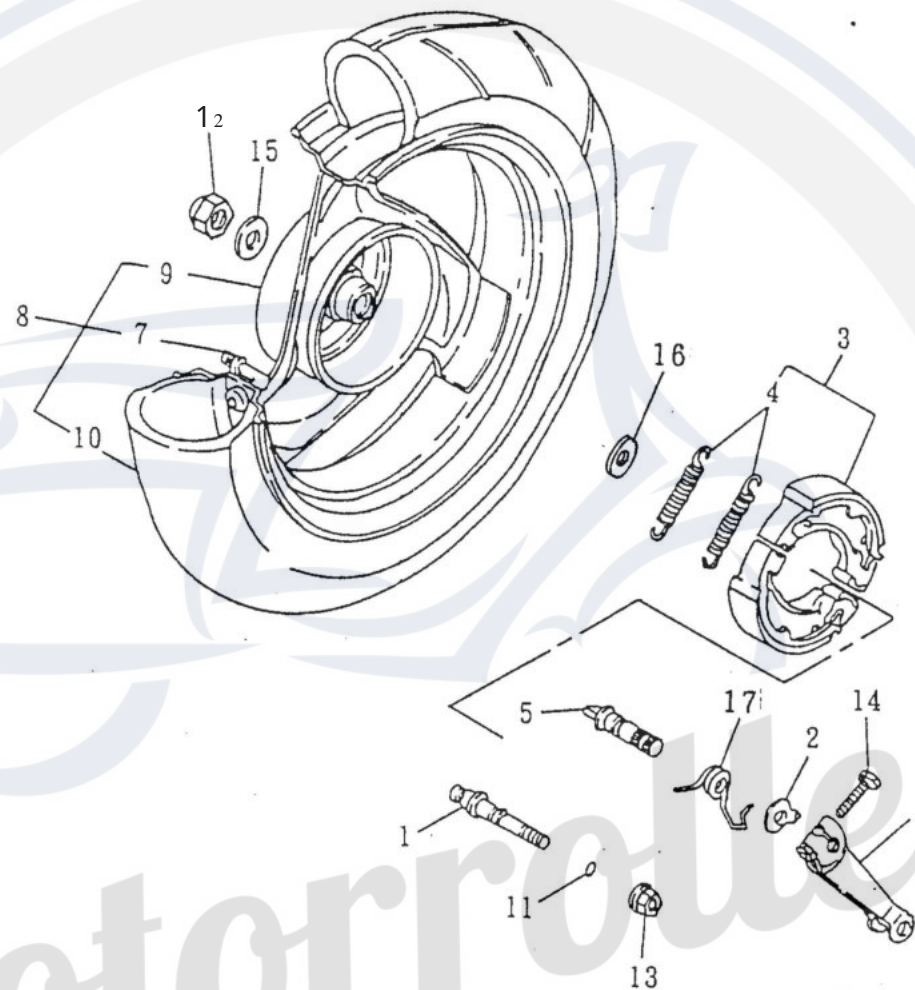


FIG. 30 REAR WHEEL 後輪

肌	PARTS 肌	PARTS NAME		Q'TY	PRICE	REMARK
1	32 32 6- 丫 舰-00	PIN ,pivot	後剎車固定軸	1		
2	32 331- 丫 肋00	PLATE,indicator	指示器平板	1		
3	32 34 5^ ^00	BRAKE SHOE KIT	後剎車塊組	1		
4	32 34 6- 丫 处-00	.SPRING ,tension	拉伸彈簧	2		
5	32 351- 丫 傭-00	CAM SHAFT	後剎車凸輪軸	1		
6	32 355- 丫 勝00	LEVER ,cam shaft	後剎車搖臂	1		
7	42 570- 、 处-00	VALVE 3rim	氣門嘴	1		
8	42 800- 丫 他-00	REAR WHEEL ASSEMBLY	後輪總成	1		
9	42 880- 丫 屢00	REAR WHEEL COMP	後輪圈	1		
10	42 890- ^ ?-00	TIRE (90/90-10)	外胎	1		
11	9 32 10-190 70	O-RING	護油圈	1		
12	9 5311-1422 14-0	NUT ,nylon	尼龍螺帽	1		
13	9 540 1-0 8120 8^	NUT ,flange	凸緣螺帽	1		
14	9 62 10-0 602 7-0	BOLT 7hexagon	六角螺栓	1		
15	9 720 1-142 620-0	WASHER ^plate	平面墊圈	1		
16	9 720 1-202 810	WASHER ,plate	平面墊圈	1		
17	9 750 8-24 172	SPRING ,torsion	後剎車扭轉彈簧	1		


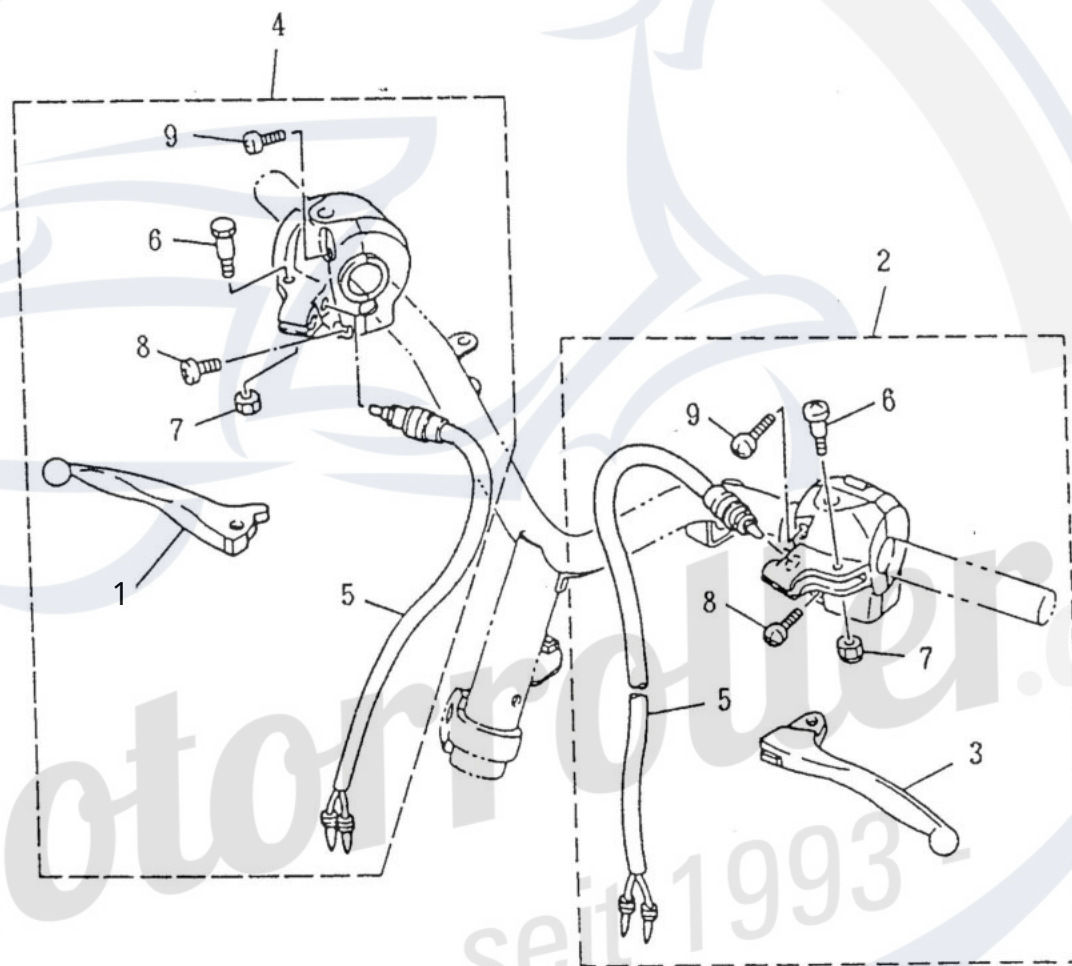


FIG. 31 HANDLESWITCH.LEVER 把手開關.把手

NO.	PARTS NO.	PARTS NAME		QTY	PRICE	REMARK
1	42872-1111-00	.LEVER R	右把手	1		
2	62910-1111-00	LEVER HOLDER ASSEMBLY L	左把手控制座總成	1		
3	62912-1111-00	.LEVER L	左把手	1		
4	62920-1111-00	LEVER HOLDER ASSEMBLY R	右把手控制座總成	1		
5	62980-1111-00	.FRONT STOP SWITCH ASSEMBLY L	前剎車燈開關總成左	2		
6	94710-05025^	.SCREW	螺絲	2		
7	95311-050805-K	.NUT,nylon	尼 龍 螺 帽	2		
8	96310-05025-K	.SCREW pan head	十 字 孔 頭 螺 絲	2		
9	96310-05035-K	.SCREW,pan head	十字孔頭螺絲 2			


Motorroller.de
- seit 1993 -

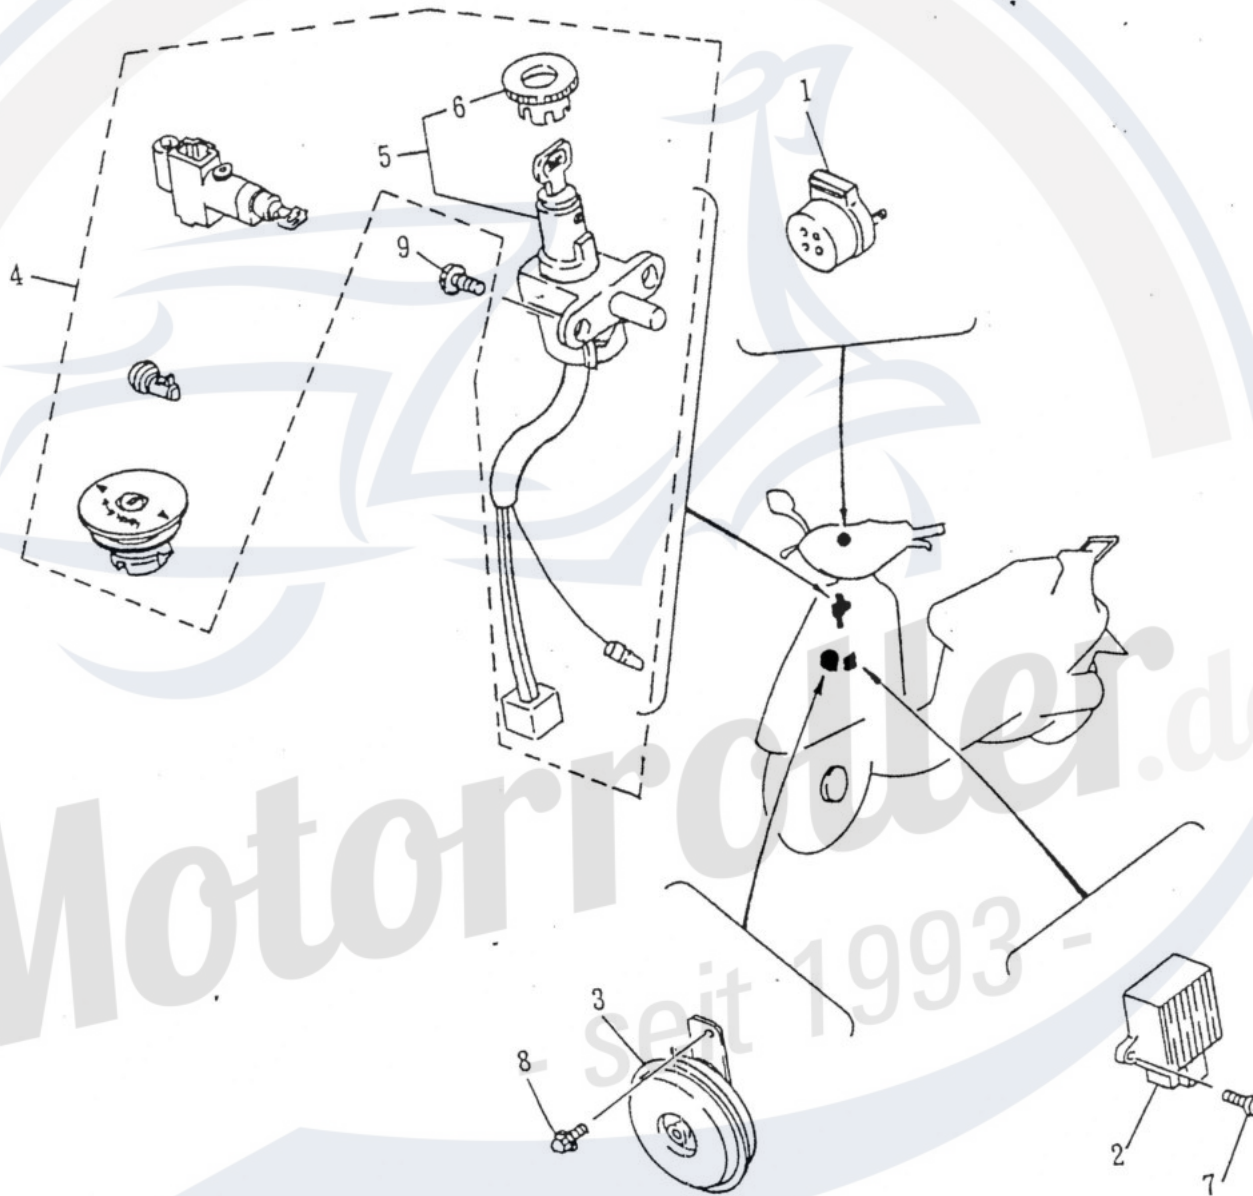

戸瓜32 £1^ (: 丁肌从1電装1

NO.	PARTS NO.	PARTS NAME		QTY	PRICE	REMARK
1	62350-漣?-00	FLASHER RELAY ASSEMBLY	方向警報斷續器總成	1		
2	62360-NAF-00	RECTIFIER & REGULATOR ASSEMB	整流穩壓器總成	1		
3	62370«^ 処-00	HORN	喇叭	1		
4	62500*^ 処-00	KEY SET	鎖組	1		
5	62501-NAF-00	.MAIN SWITCH STEERING LOCK	主開關舵鎖總成	1		
6	62511«^ 00	.CAP, switch	開關帽	1		
7	96310-05012-0	SCREW,pan head	十字孔頭螺絲	2		
8	96414-06010-0	BOLT,flange	凸緣螺栓	1		
9	96414-06012-0	BOLT,flange	凸緣螺栓	2		

Motorroller.de
- seit 1993 -

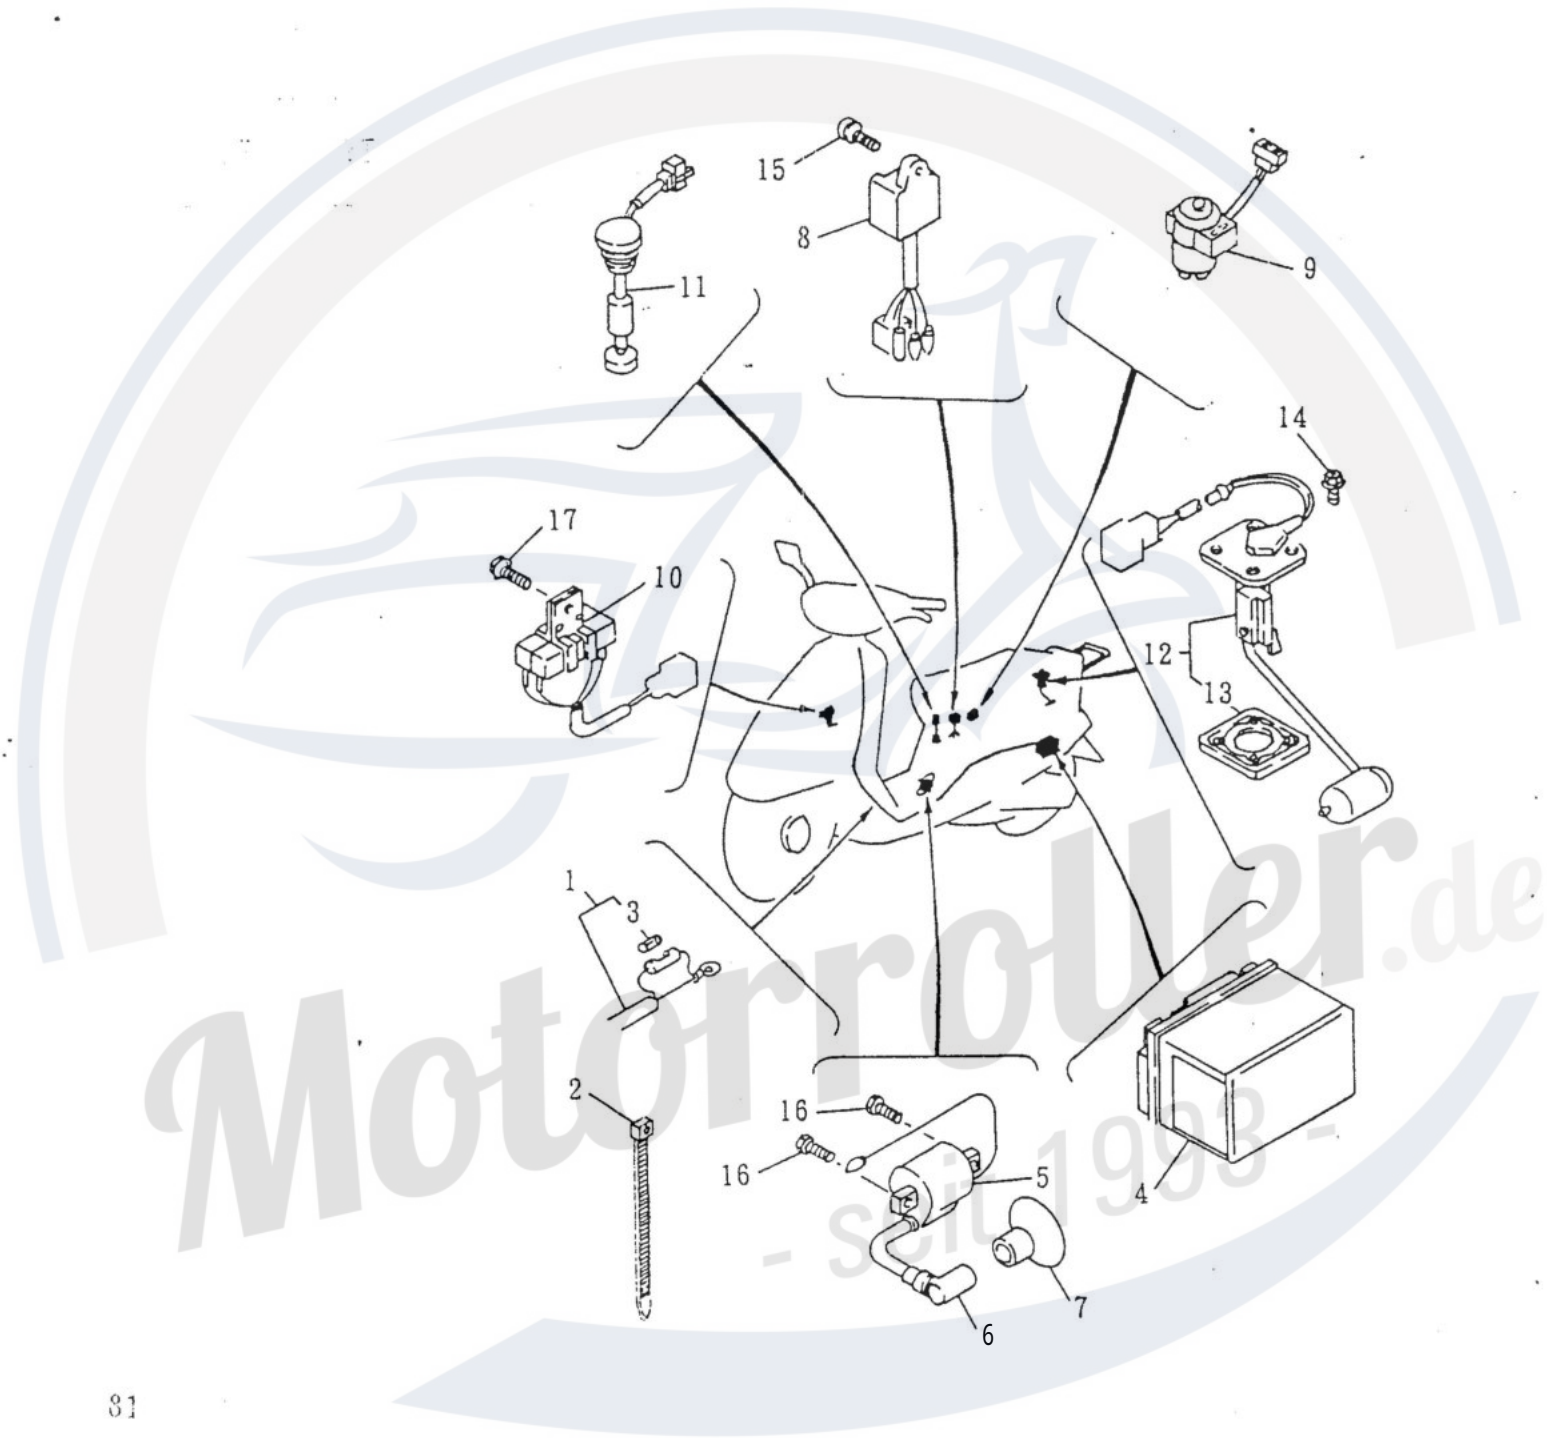

戸1&3ELECTRICAL 2電装2

項目	PARTS 月凡	PARTS NAME		Q'TY	PRICE	REMARK
1	61120-1^^-00	WIRE HARNESS ASSEMBLY	主配線總成	1		
2	61135^々△-00	BAND, cord	束帶	3		
3	61151^什也-00	.FUSE	保險絲	1		
4	62100-NAF-00	BATTERY ASSEMBLY	蓄電池總成	1		
5	62310召々△-00	IGNITION COIL ASSEMBLY	點火線圈總成	1		
6	6 2 3 2 NAF 0	PLUG CAP ASSEMBLY	火星塞蓋總成	1		
7	62322-々△-00	SEAL,plug cap	火星塞蓋套	1		
8	62540-NAF-00	C.D.I. UNIT ASSEMBLY	。 及1.組件總成	1		
9	6255(^00	STARTER RELAY ASSEMBLY	起動開關總成	1		
10	62570-什也00	RESISTOR ASSEMBLY	電阻器總成	1		
11	62720^^00	OIL LEVEL GAUGE ASSEMBLY	油標總成	1		
12	6277(^什也00	SENDER UNIT ASSEMBLY	汽油油面感應器	1		
13	62773-々△-00	.GASKET,sender unit	墊片	1		
14	96218-05012-0	BOLT,hexagon with washer	六角螺栓附墊圈	4		
15	96310-06016-0	SCREW,pan head	十字孔頭螺絲	1		
16	96312-06020-0	SCREW,pan head with washer	十字孔頭螺絲附墊圈	2		
17	96414-06010-0	BOLT,flange	凸緣螺栓	1		

NUMERICAL INDEX 部品播號索I

PART NO.	REF NO.	PORTAL PART NO.	REF NO.	PORTAL PART NO.	REF NO.	PORTAL PART NO.	REF NO.	PORTAL PART NO.	REF NO.
部品番號	項次	部品番號	項次	部品番號	項次	部品番號	項次	部品番號	項次
11111小処-00	1-1	13621拆?00	1-2	31613^/-00	11-2	45821^/-00	29-10	55362-从卜00	17-10
11121-NAF-00	1-2	15111-丫処-00	1-1	31615-尺処-01	11-3	45835^/-00	29-11	55366-NAF-00	17-11
11151-NAF-00	1-3	15116小从-00	2-2	31618-市-00	11-4	45836-脚-00	29-12	55509-从卜00	26- 1
11181拆口00	1-4	15117小ハ1^00	3-3	32210-丫処-00	15-1	45838^/-00	29-13	55510^?-00	26- 2
11400-1^00	2-1	15163小ハ?00	4-4	32326-丫淋00	30-1	45849-^00	29-14	55517小ハ?00	26-3
11412-丫処-00	2-2	15171抛?00	5-5	32331-丫肌00	29-1	45851-月良-00	29-15	55518^処-00	26-4
11422拆?00	2-3	15211-丫ハ?00	6-6	32331-丫ハ>1-0030-2		45855->^00	29-16	55530-^1^00	26-5
11451小ハ5-00	2-4	15221^?00	7-7	32345^/-00	29-2	45859-^00	29-17	55700->^00	28-1
11481-^口00	2-5	15228-丫从-00	8-8	32345-从^00	30-3	46110抛厂^00	24-1	55701-1^02	28-2
11631-NAF-00	2-6	15311-丫ハ1^00	9-9	32346-丫从^00	29-3	46240-1^00	24-2	55711->^00	21- 7
11636从ハ^00	2-7	15351^00	10-10	32346^?00	30-4	46241-1^00	24-3	55713-心?00	28-3
12611-NAF-00	3-1	15411^00	1-1	32351-丫如口-00	30-5	46411-1^00	16-8	55714-从?00	28-4
12631小ハ^00	3-2	15421^00	2-2	32355-丫ハ1^00	30-6	46412小処-00	16-9	55721^/-00	28- 5
12651-^/-00	3-3	15432-丫ハ沁00	3-3	33211^00	20-1	46414-NAF-00	16-10	55722-1^00	28- 6
12653-1^口-00	3-4	15436-丫ハ沁00	4-4	35500-NAF-00	12-1	46415小処-01	16-11	55732-1^00	28- 7
12658-^00	3-5	15481-丫淋00	5-5	35503小処-00	12-2	46416-NAF-00	16-12	55736-1^00	21- 8
13100抛口-00	4-1	22601-丫ハ(10)	1-1	35550-^口-00	12-3	51121抛[00	19- 1	55742->^00	28- 8
13124抛口-00	4-2	22620-NAF-00	2-2	35560^/-00	12-4	51151^?00	17-1	55743-NAF-00	28-9
13178小六口-00	4-3	22630-NAF-00	3-3	35580召从-00	12-5	51171-NAF-00	19-2	55746->^00	21-9
13185抛?00	4-4	23524^?00	4-4	35800-NAF-00	13-1	51552抛?00	17-2	55750-^?00	21-10
13187拆口-00	4-5	23538-NAF-00	5-5	35801-NAF-00	13-2	51712^00	19-3	55751-似卜01	28-10
13201小ハ口-01	5-1	23570^?00	6-6	35811-NAF-00	13-3	51722抛?00	19-4	55756-NAF-01	28-11
13203-从?00	5-2	23572-1^00	7-7	35831^ハ卜00	13-4	51732^?00	19-5	55756-NCF-00	21-11
13204^/-00	5-3	23574-豐大?00	8-8	41110^?00	14-1	52705小^00	21- 1	55760->^厂00	21-12
13207-^口-00	5-4	23576-丫心-01	9-9	41232^/-00	14-2	52726^/-00	21-2	55761-^?00	21-13
13211-^口-00	5-5	23578-从口-00	10-10	41411 0時羅口-00	14-3	52730-丫ハ?00	21-3	55762-止口-00	21-14
13212拆口-00	5-6	23612-心厂-00	1-1	42100小下-00	16-1	52829-从口00	21-4	55766-1^00	21-15
13233-1^00	5-7	23632-从口-00	2-2	42101-冊-00	16-2	52830^/-00	21-5	56100抛卜00	14-4
13240^/-01	5-8	23650-NAF-00	3-3	42110-1^00	16-3	52898-NAF-00	21-6	56280-从?00	25-3
13241^?00	5-9	25602小処-00	1-1	42120^^-00	16-4	53308-皿戸-00	18- 1	56290拆?00	25-4
13242-1^01	5-10	25611-^00	2-2	42129^^-00	16-5	53311->^00	18-2	56328小ハ[-00	19- 6
13247-^口-00	5-11	25620小六口-00	3-3	42141-脚-00	16-6	53313^/-00	18-3	56576-丫六口-00	19-7
13261^/-00	5-12	25626小六?00	4-4	42195^^-00	16-7	53371>从処-00	18-4	5657 処-00	17-12
13271-NAF-00	5-13	25660^?00	5-5	42500^/-00	29-4	53385-NAF-00	18-5	5 6781-1^00	17-13
13286抛?00	5-14	25664->^?00	6-6	42515^/-00	29-5	53396-从^00	18-6	56783小ハ?00	19-8
13291-从口-00	5-15	25670-从[-00	7-7	42570抛?00	29-6	53481^処-00	20-2	61120^/-00	33-1
13296-^口-00	5-16	25680-NAF-00	8-8	42570从从-00	30-7	53483-、処-00	20-3	61135抛卜00	33-2
13297小ハ?00	5-17	25684-NAF-00	9-9	42580-冂冂-00	29-7	55213■冂冂-00	25-1	61151-^処-00	33-3
13298-NAF-00	5-18	25711->^00	10-10	42590^17-00	29-8	55215小^/-00	25-2	61320-丫処-00	24-4
13410-1^00	6-1	25716-从?00	1-1	428 00^00	30-8	55300-NAF-00	27-1	61379抛1^00	24-5
13411-^01	6-2	25721-NAF-00	2-2	42872-冂冂-00	31- 1	55311小ハ沁-00	17-3	61389-1^00	24-6
13412-丫ハ口-00	6-3	25723-似厂^00	3-3	42880-丫淋00	30-9	55314->^00	27-2	61393^/-00	24-7
13437-^/-00	6-4	25732拆口-00	4-4	42890^/-00	30-10	55320抛?00	27-3	61520^/-00	26-6
13451-^口-00	6-5	25741-丫ハ^00	15-15	43102^ハ^00	22-1	55340-NAF-00	27-4	61611拆口-00	24-8
13452-^?00	6- 6	25753-似口-00	6-6	43111^00	22-2	55350^/-00	17-4	61612撒?00	24-9
13453抛?00	6-7	25757^?00	17-17	43500^?00	22-3	55351^?00	17-5	61613-^/-00	24-10
13555-^?00	6-8	26111-丫六口-00	1-1	43570小女子-00	22-4	55352-NAF-00	17-6	61620召八口-00	24-11
13610抛口-00	6-9	26410-丫六厂-00	2-2	43751-做?00	23-1	55356-从口-00	17-7	61660掀口-00	24-12
13613-心口-00	6-10	26420-丫ハ口-00	3-3	43771^?00	23-2	55360-NAF-00	17-8	61661掀^00	24-13
13616-从口-00	6-11	31610-1^下-00	1-1	45801^/-00	29-9	55361^?00	17-9	61662-^/-00	24-14

？从丁肌 部品番號	脚肌 項次	口从丁肌 部品番號	：姬肌 項次	口从丁肌 部品番號	尺研獻 學多一	口他丁肌姬肌 學客一	尸从丁肌娜阶 一啊■一.3：^	口从丁肌咖肌 ^*11.？兔
93210-24140	7-17	95101-05012	28-12	96310-03006-0	5-19	97010-17010	10-11	
93210-31080	7-18	95101-06010-0	18-7	96310-03008-6	6-19	97010-17010	7-32	
93310-0812100	8-14	95201-030603-0	26-8	96310-04006-0	12-8	97010-19012	4-14	
93310-1014125	2-10	95201-050804-0	28-13	96310-04012-0	5-20	97010-20012	29-27	
93310-1622118	2-11	95201-101408-0	12-7	96310-05010^	24-19	97011-07008	4-15	
93310-2533160	10-6	95201-101708-0	9-22	96310-05012-0	32-7	97012-42018	10-12	
93310-5559127	8-15	95201-102406-0	9-23	96310-05014-0	4-13	97013-33012	10-13	
93320-0828092	7-19	95201-284004-0	9-24	96310-05025^	31-8	97050-10012	2-16	
93320-1035112	29-21	95311-050805-	31-7	96310-05030-0	24-20	97050-12019	26-10	
93320-123210	10-7	95311-061006-8	29-25	96310-05035^	31-9	97201-051208-0	24-22	
93320-173510	10-8	95311-101710-3	29-26	96310-06010-8	10-10	97201-061910	10-14	
93320-1735101)	7-20	95311-101710-0	14-8	96310-06010-0	12-9	97201-071008-6	29-28	
93320-20421211	10-9	95311-101710-0	15-2	96310-06012-0	7-26	97201-081620-0	8-22	
93320-204714	2-12	95311-101710-0	24-18	96310-06012-0	8-20	97201-082420-0	21-24	
93510-051033	2-13	95311-121912-0	14-9	96310-06016-0	12-10	97201-101726-0	12-12	
93510-102025	29-22	95311-142214-0	30-12	96310-06016-0	21-22	97201-102020-0	20-10	
93510-131838	9-20	95401-061006-0	21-19	96310-06016-0	33-15	97201-102020-0	24-23	
93510-152012	2-14	95401-061006-0	22-9	96310-06020-6	7-27	97201-122210	10-15	
93510-152030	8-16	95401-061006-0	7-25	96310-06025-8	7-28	97201-131810	9-25	
93510-182322	9-21	95401-061007-0	21-20	96310-06025-0	12-11	97201-142620-0	30-15	
93560-68509	3-6	95401-071007-0	1-7	96310-06035-6	7-29	97201-152810-	8-23	
93560-68510	3-7	95401-081208-3	30-13	96310-06065-5	7-30	97201-202607-6	29-29	
93560-68510	6-15	95601-254007-0	16-13	96312-04008-0	5-21	97201-202810	30-16	
93580-41610	3-8	96104-51016-0	8-18	96312-04012-0	13-6	97201-557606	8-24	
93580-41836	14-5	96104-51216^	19-10	96312-04012-0	5-22	97210-061215	11-9	
93580-61509	7-21	96106-51216^	19-11	96312-06020-0	28-16	97210-061315	22-12	
93580-62614	20-5	96106-51216^	21-21	96312-06020-0	33-16	97230-081512	7-33	
93580-81610	3-9	96110-41616-0	17-14	96312-06020^	3-11	97301-030507-8	6-22	
93580-81610	6-16	96110-41616-0	28-14	96312-06020^	6-20	97301-040710-0	12-13	
94410-10014	7-22	96110-52512^	6-18	96314-06016-0	3-12	97310-102425	9-26	
94410-12016	7-23	96110-64016-0	3-10	96316-06010-3	11-6	97310-126005	10-16	
94420-03013	2-15	96112-41218^	18-8	96316-06018^	19-13	97501-02021	8-25	
94430-30012	4-11	96112-51216^	17-15	96316-06021	17-17	97501-08103	4-16	
94510-30012	4-12	96112-51216^	28-15	96318-06020-0	22-10	97501-30114	14-11	
94510-80032	8-17	96112-51612-0	25-5	96414-06010-0	22-11	97506-12082	20-11	
94610-10078^	20-6	96112-51612-0	26-9	96414-06010-0	32-8	97506-32131	20-12	
94610-10115^	21-16	96112-51612-0	27-5	<) 6414-06010-0	33-17	97508-24172	30-17	
94610-10155-13	29-23	% 112-51612^	17-16	96414-06012-0'	17-18	97^ 08-26255	29-30	
94610-12250-0	14-6	96112-51612^	18-9	96414-06012-0	21-23	97508-32535	8-26	
94706-06023^	7-24	96112-51612^	19-12	96414-06012-0	28-17	97510-26300	8-27	
94710-05025^	31-6	96112-51612^	20-8	96414-06012-0	32-9			
94710-06016-0	21-17	96112-52116-0	25-6	96414-08012-0	14-10			
94710-06020^	6-17	96210-06025^	8-19	96414-08016-0	7-31			
94710-06051^	21-18	96210-06027-0	30-14	96414-08020^	11-7			
94710-10040-0	14-7	96210-10040-0	15-3	96414-08030^	11-8			
94714-06018-0	11-5	96218-05012-0	25-7	96414-08032-0	15-4			
94716-06030-3	29-24	96218-05012-0	33-14	96414-10047-0	24-21			
94717-07109-0	1-6	96218-06016-0	18-10	96510-06020^	13-7			
95101-05012	19-9	96218-06016-0	23-3	96510-06020^	6-21			
95101-05012	20-7	96218-06020-0	20-9	97010-15010	8-21			